



HEWLETT  
PACKARD

Mainframe  
Features

HP Internet Advisor

---

## Mainframe Features

---

## HP Internet Advisor

J2300C, J3446C, J3754C

**Copyright**

Copyright Hewlett-Packard Company 1998

**Notice**

The information contained in this document is subject to change without notice.

**Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.** Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

**Warranty**

A copy of the specific warranty terms applicable to your product can be obtained from your local Sales and Service office.

**Trademarks**

Microsoft is a U.S. registered trademark of Microsoft Corp.

MS-DOS is a U.S. registered trademark of Microsoft Corporation.

Netscape Navigator is a U.S. trademark of Netscape Communications Corporation.

Windows is a U.S. registered trademark of Microsoft Corp.

**Product Support**

If you have questions, concerns or need more information, call or contact us:

In the U.S.A.:

U.S.A. Technical Response Center - 1-800-698-0061

by FAX - 303-754-4802

Internationally:

by calling your local HP Sales Office

On the Web:

<http://www.hp.com/go/internetadvisor>

Hewlett-Packard Company

5070 Centennial Boulevard

Colorado Springs, Colorado 80919-2497

---

## Contents

### Mainframe Features Overview

Introduction to HP Internet Advisor .....	1-3
Introduction to this User's Guide .....	1-4
Product Matrix .....	1-5

### Hardware & Operating System Features

Mainframe Specifications .....	2-3
Apply Power to the Advisor .....	2-4
Starting Applications from Windows 95 .....	2-5
Starting Applications with the Alternate Boot Process .....	2-6
Setting the Time and Date .....	2-8
The Keyboard and Button Mouse .....	2-9
Keyboard Operation LEDs .....	2-11
The Display .....	2-12
Connecting an External Display Monitor .....	2-12
Set VGA Display Mode .....	2-13
Modem Selection .....	2-14
HP Demo Icons .....	2-15
Connecting a Printer .....	2-16
Selecting a Printer for Windows 95 applications .....	2-17

### HP J2300C

Hardware Features .....	3-3
Standard Connectors .....	3-5

### HP J3446C

Hardware Features .....	4-3
Top Panel Label .....	4-5
Standard Connectors .....	4-6

### HP J3754C

Hardware Features .....	5-3
Top Panel Label .....	5-5

## **Interface Modules**

Interface Modules and Filler Panel .....	6-3
Install into a Mainframe .....	6-3
Remove from a Mainframe .....	6-4
Install or Remove from an Undercradle .....	6-6

## **Undercradles**

Miscellaneous Bag of Parts .....	7-3
Attaching the Undercradle .....	7-4
Removing the Undercradle .....	7-7
The Empty Undercradle HP J2295A .....	7-8
Left Side of Undercradle .....	7-8
Right Side of Undercradle .....	7-8
Right Side Endcap Expander .....	7-9
Right Side Flat Endcap .....	7-9
Undercradle Bottom .....	7-10
Undercradle Top .....	7-10
Connector Board .....	7-11
Silver Tabs .....	7-11
Taking the Undercradle Apart .....	7-12
Installing printed circuit cards .....	7-12
Putting the Undercradle Back Together .....	7-13

## **Modem & Ethernet PC Cards**

Introduction .....	8-3
Compatibility .....	8-3
PC Card General Tips .....	8-4
Insertion and removal of the PC Card .....	8-5
Installing a PC Card .....	8-5
Process to remove a PC Card .....	8-6
System Identification of PC Card .....	8-6
Properties of a PC Card operating with Windows 95 .....	8-7
Installing Modem or Ethernet PC Card Drivers .....	8-7
Software Configuration .....	8-9
Modem PC Cards .....	8-13
Modem PC Card setup in HP Toolkit .....	8-14
10/100 Ethernet PC Card Adapter .....	8-16
10/100 Ethernet PC Card Documentation .....	8-17

## **Software**

HP Internet Advisor Family of Products Software .....	A-3
---	-----

## **Specifications**

Physical Characteristics .....	B-3
Operating Conditions .....	B-5
Safety Conditions .....	B-6
Additional Help .....	B-6

## **Windows 95 Operating System**

Operating System .....	C-3
HP Toolkit (HP Internet Advisor WAN) .....	C-3
HP Internet Advisor LAN .....	C-3
Installing Windows 95 Applications .....	C-4

## **PC Card Modem**

Overview of the Modem AT Command Set .....	D-3
PC Card Modem AT Commands and Descriptions .....	D-4

## **Breakout Box, LEDs & Connectors**

RS-232/V.24 Breakout Box and System LEDs .....	E-3
Mark/Space Indicator .....	E-4
Source Voltage .....	E-5
Active Interface LEDs .....	E-5
Lead Status LEDs .....	E-6
V-Series Interfaces .....	E-7
RS-232C/V.24 .....	E-8
RS-449 .....	E-9
V.35 .....	E-10
Interface Pin-Out Comparison .....	E-11
AUI - 100Base-T .....	E-13
MII - 100Base-T .....	E-14
MDI - 100Base-TX .....	E-15

## **Declarations of Conformity**

J2294C CEPT-E1 DB9 & RJ45 .....	F-3
J2300C Internet Advisor WAN .....	F-4
J2306B/J2309B Ether/Ether/TR Interface for Internet Advisor .....	F-5

J2307A LAN Token Ring Undercradle .....	F-6
J2524A FDDI Interface for LAN	
Internet Advisor .....	F-7
J2527A TMS Undercradle for Internet Advisor .....	F-8
J2900A High Speed Acquisition System .....	F-9
J2904A ISDN BRI Module .....	F-10
J2904B,J2293,94,96,97,98,99B ISDN Modules .....	F-11
J2905B ISDN BRI U Interface Module .....	F-12
J2908A DDS 4-Wire Interface Module .....	F-13
J2909A ATM Advisor Series .....	F-14
J2912A Internet Advisor ATM Series .....	F-15
J2913A Internet Advisor ATM 155-UTP Module .....	F-16
J3444A Fast Ethernet LAN Analyzer .....	F-17
J3445A 100 Base-FX Interface Module .....	F-18
J3446C and J3447A Internet Advisor WAN .....	F-19
J3754C Internet Advisor - pcAdvisor .....	F-20

## **Hewlett-Packard Sales Offices**

---

## Safety Information

Before you use this instrument, be sure to pay special attention to the "Safety" and "Warning" sections in this Manual. Failure to comply with the precautions or with specific warnings in this book violates safety standards of design, manufacture, and intended use of this instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

**Electric Shock Hazard.** Do not remove the system covers. To avoid electric shock, use only the supplied power cords and connect only to properly grounded (3-pin) wall outlets.

**Explosion Hazard.** Do not operate in the presence of flammable gases.

**Fire Hazard.** For continued protection against fire hazard replace only with fuse of same type and rating.

**Hazardous Material.** Should the LCD be damaged the liquid crystal material can leak. Avoid all contact with this material, especially swallowing. Use soap and water to thoroughly wash all skin and clothing contaminated with the liquid crystal material.

**Cleaning.** To clean the instrument, use a damp cloth moistened with a mild solution of soap and water. *Do not* use harsh chemicals. *Do not* let water get into the instrument.

**Product Damage.** Do not use this product when:

- the product shows visible damage,
- fails to perform,
- has been stored in unfavorable conditions, or
- has been subject to severe transport stresses.

Make the product inoperative and secure it against any unintended operation. Contact your nearest Hewlett-Packard Sales office for assistance.



---

## Warning Symbols Used in This Book



Instruction book symbol - the product will be marked with this symbol when it is necessary for the user to refer to the instruction book in order to protect against damage.



A product marked with this symbol indicates it is a laser product. When necessary, this symbol will be included in the instruction book for the user to refer to in order to protect against personal injury and/or correct product handling.



Indicates potential for electrical shock.

---

### **WARNING**

---

An operating procedure, practice, etc. that, if not correctly followed could result in personal injury or loss of life.

---

### **CAUTION**

---

An operating procedure, practice, etc., that if not strictly observed, could result in damage to, or destruction of, equipment or software.

---

## Product Information

This is an Installation Category II product.

This is a Pollution degree 2 product.

---

## Conventions Used in this Book

This manual uses the following conventions:

- Keys on the keyboard such as **PgDn**, **↑** **↓**, **Enter** or **F1** (function key #1) are printed in the bold as you see here.
- Text that should be typed is printed in characters such as:  
`a:\install`

---

### NOTE

---

An operating procedure, practice, or information of importance, separated from normal text.

---

## Operating Restrictions

The following warnings and operating information are shown in French (on the left side) with the English translation (on the right side).

---

### MISE EN GARDE

Cet appareil répond aux normes de la «Classe de sécurité I» et est muni d'un fil de mise à la terre pour votre protection.

---

### WARNING

This product is a Safety Class I instrument with a protective earth terminal.

---

### MISE EN GARDE

Pour prévenir les risques de choc électrique, la broche de mise à la terre du cordon d'alimentation ne doit pas être désactivée.

---

### WARNING

For protection from electric shock hazard, power cord ground must not be defeated.

---

### Restrictions d'utilisation

L'utilisateur se doit d'observer les mesures de précaution énumérées ci-dessous pour toutes les phases d'utilisation, de service et de réparation de cet appareil. Le fait de ne pas s'y conformer équivaut à ne pas respecter les mises en garde spécifiques contenues dans ce manuel et constitue une violation des normes de sécurité relatives à la conception, la fabrication et l'utilisation prévue de cet appareil. La société Hewlett-Packard n'assume aucune responsabilité envers un client qui manquerait de se conformer à ces exigences.

---

### Operating Restrictions

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions with specific warnings in this manual violate safety standards of design, manufacture, and intended use of this instrument.

---

### Mise à la terre

Afin de minimiser les risques de choc électrique, le châssis et le cabinet de l'appareil doivent être mis à la terre. L'appareil est équipé d'un cordon d'alimentation muni d'une fiche homologuée à trois lames, compatible c.a. La prise murale et la prise femelle de la rallonge électrique doivent respecter les normes de sécurité de la «Commission électrotechnique internationale» (IEC).

---

### Grounding

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor AC power cable compatible with an approved three-contact electrical outlet. The power jack and mating plug of the power cord must meet International Electrotechnical Commission (IEC) safety standards.

**Environnement**

Ne faites pas fonctionner cet appareil en présence de gaz inflammables ou de vapeurs dangereuses. L'utilisation de n'importe quel appareil électrique dans ces conditions constitue un risque élevé pour votre sécurité.

**Service et ajustement**

Des «tensions dangereuses» résident dans cet appareil. Par conséquent, le service et l'ajustement doivent être effectués uniquement par une personne qualifiée.

Ne remplacez pas de composantes lorsque le cordon d'alimentation est sous tension. Il pourrait y avoir présence de «tensions dangereuses» même lorsque l'appareil est déconnecté.

Ne faites pas de service interne ou d'ajustement sauf en présence d'une autre personne, capable de prodiguer les premiers soins et de pratiquer la réanimation.

**Matière dangereuse**

Si l'affichage LCD est endommagé, la matière constituant les cristaux liquides peut se répandre. Éviter tout contact avec cette matière, et en particulier ne pas l'avaler. Utiliser de l'eau et du savon pour nettoyer soigneusement la peau et les vêtements qui auraient été contaminés par la matière constituant les cristaux liquides.

**Service non autorisé**

L'installation de pièces étrangères, ou toute modification apportée à l'appareil sans le consentement de Hewlett-Packard est formellement interdit. Le fait de procéder à de tels modifications sans autorisation pourrait entraîner l'annulation de la garantie de l'appareil ou de tout contrat de service.

Pour un service et des réparations autorisées, retournez l'appareil à un point de vente et service Hewlett-Packard.

**Environment**

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

**Service and Adjustment**

Dangerous voltages exist within this instrument. Service and adjustment of this instrument is to be performed only by trained service personnel.

Do not replace components with the power cable connected. Dangerous voltages may be present even when the power cable is disconnected.

Do not perform internal servicing or adjustment unless another person, capable of rendering first aid and resuscitation is present.

**Hazardous Material**

Should the LCD be damaged the liquid crystal material can leak. Avoid all contact with this material, especially swallowing. Use soap and water to thoroughly wash all skin and clothing contaminated with the liquid crystal material.

**Unauthorized Service**

The installation of substitute parts or the installation of any instrument modification not authorized by Hewlett-Packard is specifically forbidden. The performance of such unauthorized service can negate the instrument warranty or any maintenance agreements.

Return the instrument to a Hewlett-Packard Sales and Service Office for authorized service and repair.

---

## Printing History

New editions are complete revisions of this book. Update packages may contain new or additional material and be released between editions. See the date of the current edition on the back cover of this book.

First Edition .....	June 1997	5966-5340
Second Edition .....	October 1997	5966-5393
Third Edition .....	January 1998	5967-1449

---

## **Mainframe Features Overview**

# What's in this Chapter

Introduction to HP Internet Advisor ..... 1-3

Introduction to this User's Guide ..... 1-4

Product Matrix ..... 1-5

---

## Introduction to HP Internet Advisor

The HP J2300C, J3446C, and J3754C Internet Advisor Family of Products is designed for testing your network needs in combination with available WAN, LAN, ISDN, and ATM Interface Modules or Undercradles. Features are integrated through software.

The Advisor Family of Products lets you look at decoded protocol information as it is traveling across a network which lets you identify network problems quickly.

The HP Internet Advisor systems consist of various combinations of Mainframes, Interface Modules, Undercradles, and Software to help you:

- Connect
- Capture
- Comprehend.



---

## Introduction to this User's Guide

This manual provides information about hardware and operating system software features of the J2300C, J3446C, and J3754C HP Internet Advisor Family of Products. This guide was created so you can look in one place to find information about these features. Your literature package will include at least one "technology related" User's Guide for information relating to LAN, WAN or ATM applications.

If you have specific Microsoft® Windows®95 questions, refer to *Introducing Microsoft Windows 95*, which is included with your HP Internet Advisor literature package.

## Product Matrix


**Table 1-1: HP J2300C, J3446C, and J3754C Mainframes and supported Undercradles**

Mainframes →	J2300C	J3446C	J3754C
↓ Undercradles	WAN	Fast Ethernet LAN	pcAdvisor
J2295A	X	X	
J2306A Eth LAN	X		X
J2306B Eth LAN	X		X
J2307A Token Ring LAN	X	X	X
J2309A Eth/TR LAN	X	X	X
J2309B Eth/TR LAN	X	X	X
J2524A FDDI	X	X	X
J2527A TIMS	X		
*J2900A High Speed Acquisition	X	X	X
J3444A Fast Eth	X		X
E4594A TELCO	X		
E6323A E1 TELCO	X		

X = Supported Now  
NOTE: \* A J2900A High Speed Acquisition Undercradle will accept any ATM Interface Module. See Table 1-3.

### NOTE

Any HP E4594A Telco Undercradle without a E4594A Serial number label that includes the phrase "INT 15," must be modified at your nearest HP Service Center in order to operate correctly with the HP J2300C Internet Advisor.



# Mainframe Features Overview Product Matrix

**Table 1-2: HP J2300C Mainframe and supported Interface Modules**

Mainframe →	J2300C WAN
↓ Interface Modules	
J2293B PRI-E1	X
J2294B PRI-E1	X
J2294C PRI-E1	X
J2296B PRI-E1	X
J2297B PRI-E1	X
J2298B PRI-T1	X
J2299B PRI-T1	X
J2904A ISDN BRI S/T	X
J2904B ISDN BRI S/T	X
J2905B ISDN BRI S/T & U	X
J2908A DDS 4-Wire	X
J2909A ATM DS-3	X
J2911A ATM J2	X
J2912A ATM OC-3	X
J2913A ATM-UTP	X
X = Supported Now NOTE: * Original T1 and E1 Interface Modules can also be used with the J2300C and J3446C. ** Test Advisor Series Interface Modules are not compatible with HP Internet Advisor.	

Table 1-3: HP J3446C Mainframe and supported Interface Modules

Mainframe →	J3446C Fast Ethernet LAN
↓ Interface Module	
HP J3447A 100BaseFX	X
X = Supported Now	

# Mainframe Features Overview Product Matrix

**Table 1-4: Interface Modules for use with a HP J2900A High Speed Acquisition Undercradle**

Mainframes →	J2300C WAN	J3446C Fast Ethernet LAN	J3754C pcAdvisor
Interface Modules ↓	With J2900A Undercradle	With J2900A Undercradle	With J2900A Undercradle
*J2293B PRI-E1	X	X	X
*J2294B PRI-E1	X	X	X
*J2294C PRI-E1	X	X	X
*J2296B E1	X	X	X
*J2297B E1	X	X	X
*J2298B T1	X	X	X
*J2299B T1	X	X	X
J2909A ATM DS-3	X	X	X
J2911A ATM J2	X	X	X
J2912A ATM OC-3	X	X	X
J2913A ATM-UTP	X	X	X
X = Supported Now			
NOTE: *You can use these T1 or E1 Interface Modules in the undercradle for ATM measurements only (these Interface Modules are not presently supported in the undercradle for other testing applications).			
** Test Advisor Series Interface Modules are not compatible with HP Internet Advisor.			

Table 1-5: Interface Modules for use with a HP J3444A Undercradle

Mainframe →	J2300C WAN
↓ Interface Modules	
Media Independent Interface	X
J3445A Fiber Interface	X
X =Supported Now	

Table 1-6: External Pod for use with a HP J2300C Mainframes

Mainframes →	J2300C WAN
↓ External Pod	
HP 18294A X.21 V/F Pod	X
X =Supported Now	

**Mainframe Features Overview**  
**Product Matrix**

---

**Hardware & Operating System Features**



## What's in this Chapter

Mainframe Specifications .....	2-3
Apply Power to the Advisor .....	2-4
Starting Applications from Windows 95 .....	2-5
Starting Applications with the Alternate Boot Process .....	2-6
Setting the Time and Date .....	2-8
The Keyboard and Button Mouse .....	2-9
Keyboard Operation LEDs .....	2-11
The Display .....	2-12
Connecting an External Display Monitor .....	2-12
Set VGA Display Mode .....	2-13
Modem Selection .....	2-14
HP Demo Icons .....	2-15
Connecting a Printer .....	2-16
Selecting a Printer for Windows 95 applications .....	2-17

---

## Mainframe Specifications

The HP J2300C, J3446C, and J3754C Internet Advisor Family of Products have an Intel Pentium P5 Chip, a 133 MHz processor, 32 Mbytes of PC memory, a 1.44 MB flexible disk drive, and a 3 gigabyte hard drive. In addition, each Mainframe has a PC Card Type III slot, serial port, parallel port, external monitor port, microphone input jack, and an external audio output jack. The Mainframes have available options of: a 33.6 Kbps Modem PC Card and/or a 10/100 Mbps Ethernet PC Card.

There are two speakers in the Mainframes for sound output. Volume control is included in the software. External speakers or a headset may be plugged into the jack labeled, "PHONES".

The following table shows additional features available with the various Mainframes.


**Table 2-1: Additional Features**

Feature	J2300C	J3446C
Telephone handset	X	
RS-232	X	
RS-449	X	
V.35	X	
Ethernet AUI		X
Fast Ethernet MII		X
100Base-TX/ 10Base-T Ethernet connectors		X

---

## Apply Power to the Advisor

Connect the AC power cable (either 115V or 230V) as shown below. The mainframe automatically determines whether the power connection is 115V or 230V. To start the mainframe, turn the power on. The ON-OFF power switch is located on the left side adjacent the power cable connector.

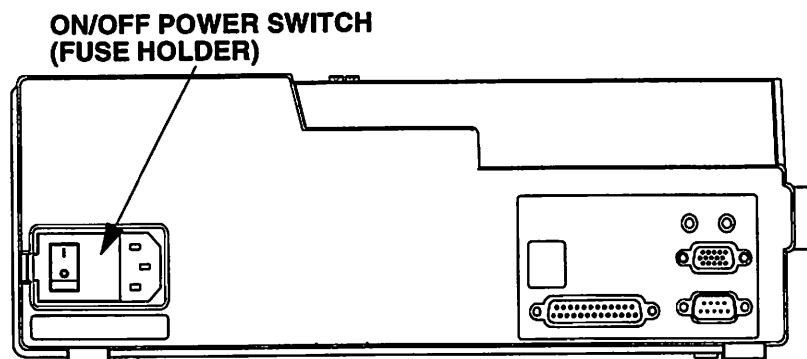

**Figure 2-1: Mainframe AC Power Connection**

If the Mainframe will not power-up, check the following:

- Power cable connections are good
- AC power is available at the outlet
- Examine the fuse

---

### CAUTION

The Mainframe comes with a three-conductor power cable that grounds the Advisor when it is connected to an appropriate power outlet. Do not operate without ground protection.


---

---

## Starting Applications from Windows 95

The first time you start the Mainframe with 9.7 (or greater) software installed, Microsoft Corporation requires you provide some information to complete the configuration of your instrument. There are dialog boxes which prompt you for information. You can accept the default selection by pressing **ENTER**.

All of your applications can be started from Windows 95. Windows 95 offers a convenient and centralized access point for the HP Internet Advisor software, as well as other applications you may want to install. To start an application, select the Start button to display the Start menu or press either of the Microsoft “flag” keyboard keys.

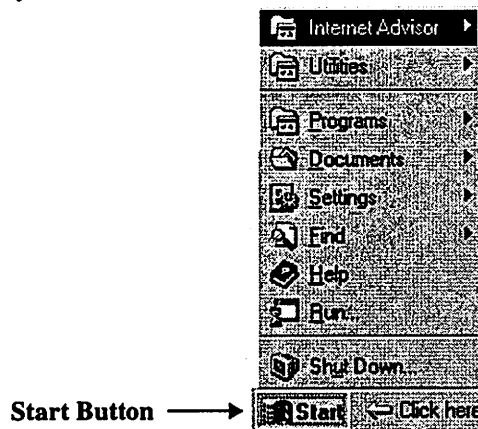


**Figure 2-2: Location of Start button**

---

## Starting Applications with the Alternate Boot Process


The HP Internet Advisor Family of Products let you use an alternate boot process from Windows 95 MS-DOS Compatibility Mode (MS-DOS mode). If you mainly use the HP Internet Advisor LAN or the WAN High Speed Toolkit and you don't use Windows 95 frequently, you can activate this option to set MS-DOS mode as your default operating system. The MS-DOS mode Startup Menu gives you direct access to these applications.

To start the Alternate Boot Process select:  
| Start | Utilities | Activate Alternate Boot Process |.

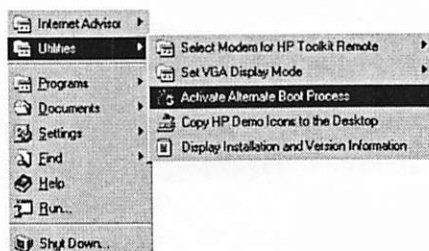

**Figure 2-3: Alternate Boot Process**

The next dialog screen confirms you want to continue with the alternate boot.

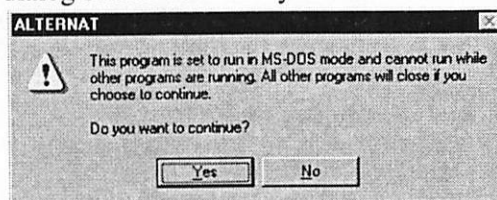

**Figure 2-4: Re-boot dialog box**

---

## The Keyboard and Button Mouse

The keyboard includes 88 keys with the integrated Button Mouse Joystick. See the following figure. The left and right mouse keys are located below the space bar on the chassis of the Internet Advisor Family of Products. The Button Mouse responds quickly to pressure and the cursor will move in the direction and with the desired speed equal to pressure applied to the Button Mouse.

The keyboard has three extra keys - two Windows 95 keys and one application key. The two Windows 95 keys will automatically bring up the Start Menu and the application key responds the same as pressing the right mouse key on any selected area of focus. There are 12 function keys.

The HP Internet Advisor Family of Products ship with a Microsoft Serial Mouse (part number 1150-1894) that may be used instead of the Button Mouse.

---

### NOTE


If you need to replace the Keyboard-Button Cover (the Button Mouse cover) of your keyboard, please call the U.S.A. Technical Response Center at 1-800-698-0061. The replacement part number is 4320-0445.

---

## Hardware & Operating System Features The Keyboard and Button Mouse


Control characters are available. To use the control characters, hold down the **CTRL** key and press the control character you want. The control characters and their corresponding keys are shown in the following figure.

### Button Mouse Joystick

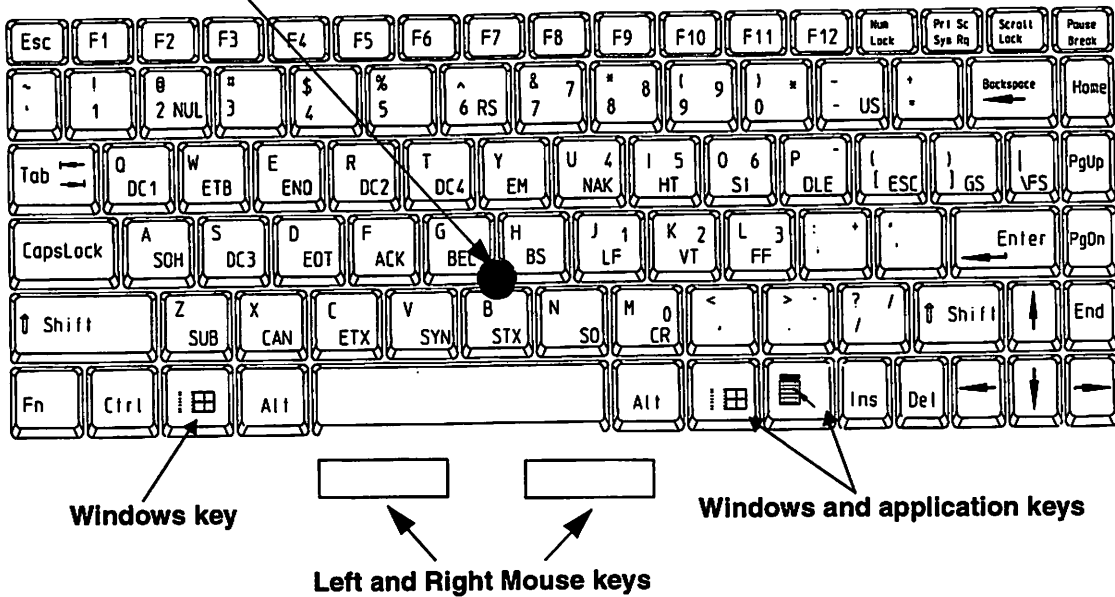

**Figure 2-7: HP Internet Advisor Family of Products Keyboard**

By pressing the **Num Lock** key, you can use the numeric keypad. The following figure shows the numeric keypad locations and numeric equivalents.

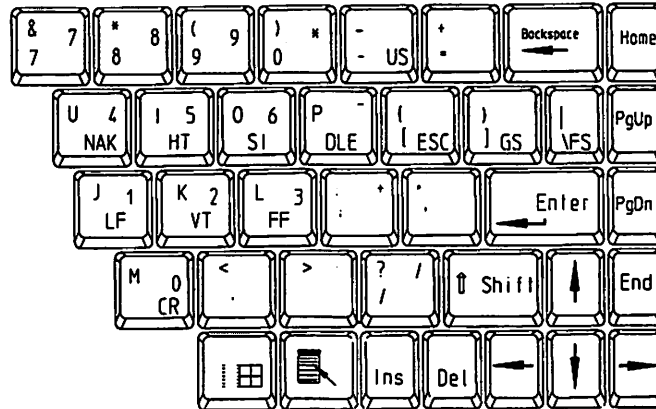

**Figure 2-8: Numeric Keypad**

## Keyboard Operation LEDs

Located above the keyboard is a group of five LEDs that show keyboard functions when they are active. These are:

- Power On
- Caps Lock
- Num Lock
- Scroll Lock
- Hard Disk



## The Display

The standard display for the HP J2300C Mainframe is a 26.5 cm diagonal (10.4 inch) passive DSTN color LCD VGA. Also available is Option 221 for J2300C which is a 26.5 cm diagonal (10.4 inch) active matrix TFT color SVGA display.

The standard display for the HP J3446C and J3754C Mainframes is a 26.5 cm diagonal (10.4 inch) active matrix TFT color SVGA display.

There is a contrast control thumb-wheel adjustment located on the left side of the passive color LCD VGA display.


If you have an Active SVGA display, then the external monitor display is SVGA resolution 800x600.

If you have a passive VGA color display, then the external monitor display is VGA resolution 640x480.

---

## Connecting an External Display Monitor

You can connect an external display monitor to the HP Internet Advisor Family of Products. Several external display monitors are available from Hewlett-Packard.

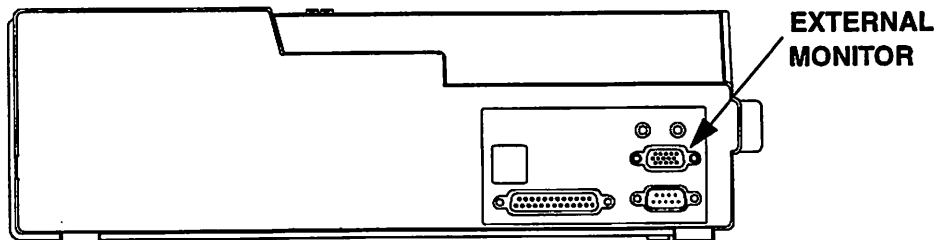

**Figure 2-9: External Monitor Port**

### To connect an External Monitor Display:

1. Set the HP Internet Advisor power switch to OFF.
2. Connect the monitor cable to the EXT MONITOR connector on the Mainframe. When you power-on the Mainframe it automatically detects if an external display is attached.

---

## Set VGA Display Mode

You can select the MS-DOS VGA display mode of your Advisor. The choices are: Disable VGA Expansion Mode or Enable VGA Expansion Mode.


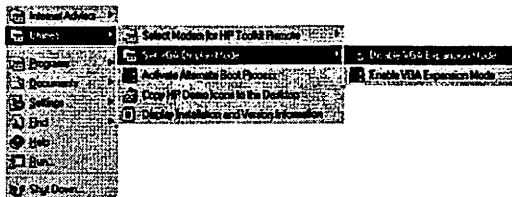


Figure 2-10: Select VGA Display Mode

---

## Modem Selection

You may select either the MHZ Modem or the TDK Modem for HP Toolkit applications by selecting: | Utilities | Select Modem for HP Toolkit Remote |.

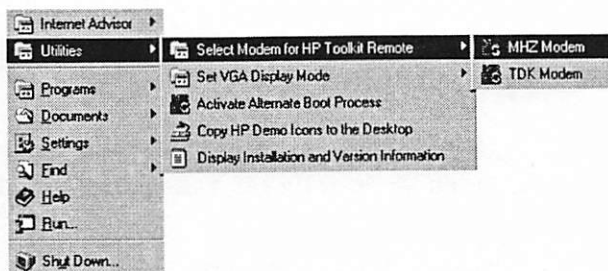

**Figure 2-11: Modem Selection**

The default modem is the TDK Modem.

---

## HP Demo Icons

When you make the selection of “Copy HP Demo Icons to the Desktop,” the program will copy the HP Demo Icons to your Desktop. These icons offer you quick access to some specific tests.

You may also create your own “Shortcut” icons for any object, including files, folders, disk drives, other computers, or printers. Please refer to *Introducing Microsoft Windows 95*, (included with your HP Internet Advisor literature package) for more information on “Shortcut” icons.

To activate the HP Demo Icons select:

| Start | Utilities | Copy HP Demo Icons to the Desktop |.



**Figure 2-12: HP Demo Icons**


If you want to remove the demo icons from your desktop, highlight them either one by one or all of them and press the **DEL** key.

---

## Connecting a Printer

The mainframe is shipped with printer output routed to the PARALLEL PORT connector on the side panel. See Figure 2-13.

A printer can be connected to the mainframe so that you can print files, help topics, and measurements results.

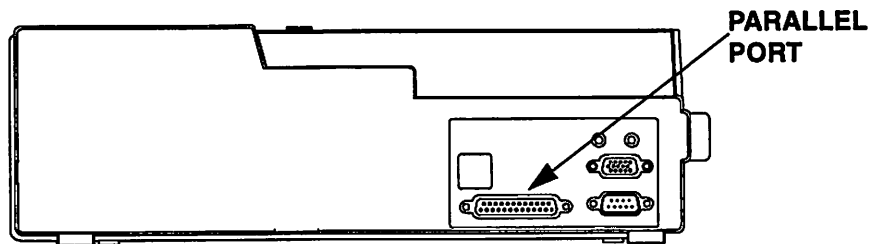

**Figure 2-13: Printer Connection**


---

## Selecting a Printer for Windows 95 applications

The Advisor's default printer selection is No Printer. If you want to use a printer with your Advisor, you must select the printer driver and output port.


### To select a printer:

From the Windows 95 desktop, select: | Start | Settings | Control Panel | then double-click the Printers icon.

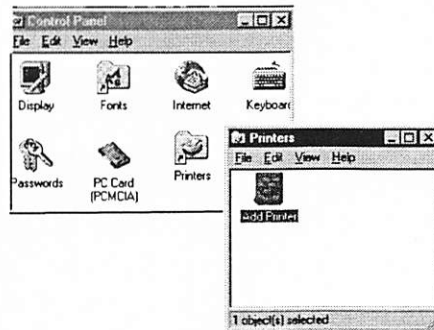

**Figure 2-14: Printers icon**

Double-click on the Add Printer icon. Use the Add Printer Wizard window to select the printer driver and port you want to use.

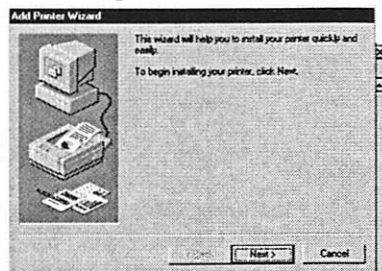

**Figure 2-15: Add Printer Wizard**

**Hardware & Operating System Features**  
**Connecting a Printer**

---

**HP J2300C**




## What's in this Chapter

Hardware Features .....	3-3
Standard Connectors .....	3-5

## Hardware Features

Figures 3-1 and 3-2 show the locations of the various connectors and plug-in features of the HP J2300C Internet Advisor.

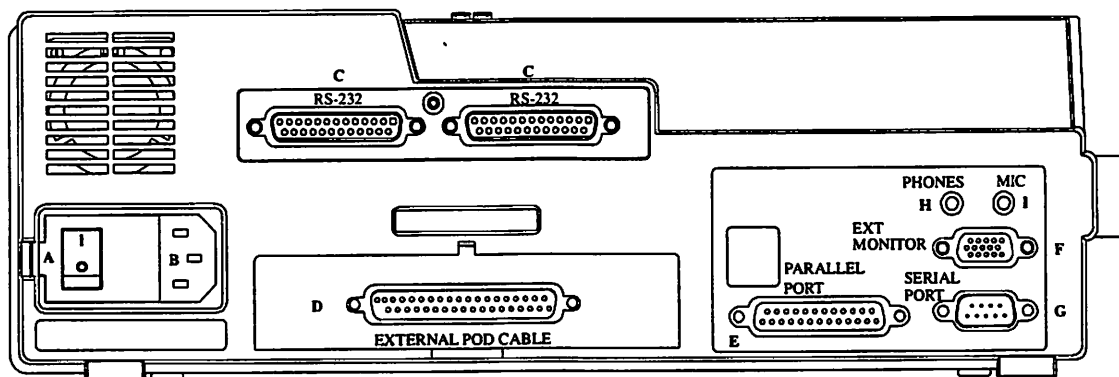


**Figure 3-1: Left side of HP J2300C Internet Advisor**

The left side of the HP Internet Advisor contains the following:

- A. On-Off Switch
- B. Power cable receptacle
- C. Two RS-232/V.24 connectors
- D. External Interface connector
- E. Parallel Port
- F. External Monitor
- G. Serial Port
- H. Headphones
- I. Microphone

**HP J2300C**  
**Hardware Features**

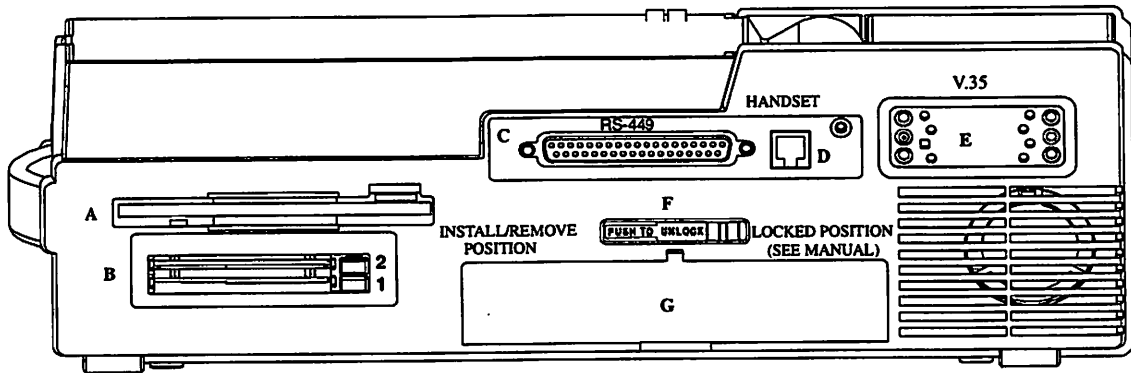

**Figure 3-2: Right side of the HP J2300C Internet Advisor**

The right side of the HP Internet Advisor contains the following:

- A. 3-1/2 inch high density flexible disk drive
- B. Dual PC Card slots
- C. RS-449 connector
- D. Handset connector
- E. V.35 connector
- F. Module Release Latch for Interface Modules
- G. Interface Module slot

---

## Standard Connectors

The HP J2300C Internet Advisor comes with standard connectors for:

- RS-232C/V.24
- RS-449
- V.35

For pin assignments please see Appendix E.

**HP J2300C**  
**Standard Connectors**

4

**HP J3446C**

# What's in this Chapter

Hardware Features .....4-3


Top Panel Label .....4-5

Standard Connectors .....4-6

---

## Hardware Features

Figure 4-1 and Figure 4-2 show the locations of the various connectors and plug-in features of the HP J3446C Internet Advisor.

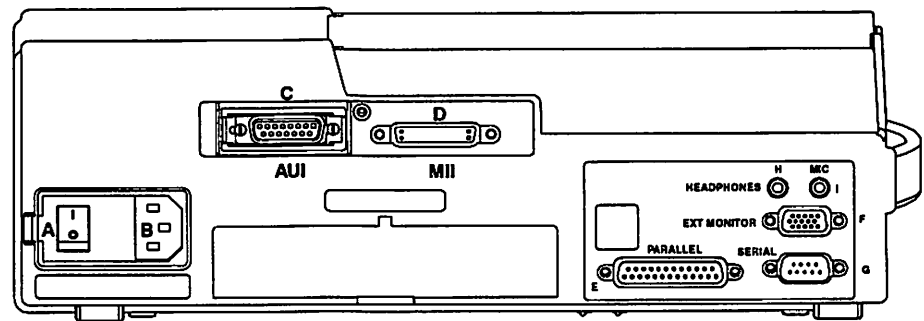


**Figure 4-1: Left side of the HP J3446C Internet Advisor**

- A. On-Off Switch
- B. Power Cord receptacle
- C. Ethernet (AUI)
- D. Fast Ethernet (MII)
- E. Parallel Port
- F. External Monitor
- G. Serial Port
- H. Headphones
- I. Microphone



**HP J3446C**  
**Hardware Features**

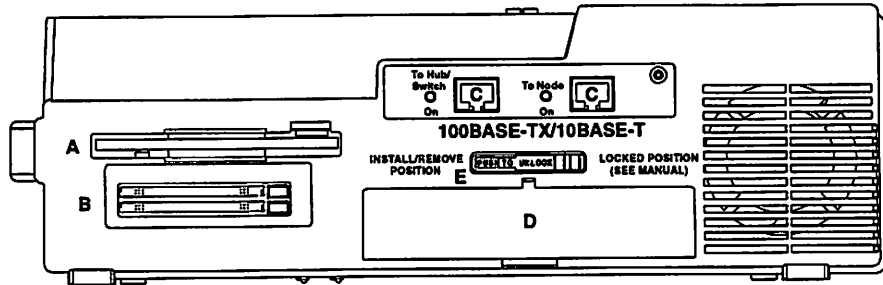

**Figure 4-2: Right Side of the HP J3446C Internet Advisor**

The right side of the HP Internet Advisor J3446C contains the following:

- A. 3 1/2 inch high density flexible disk drive
- B. PC Card Slot
- C. 100Base-TX/10Base-T Ethernet connector
- C. 100Base-TX/10Base-T Ethernet connector
- D. Interface Module slot
- E. Module Release Latch for Interface Modules

There are Interface Modules available for use with the HP Internet Advisor J3446C. See Chapter 1, page 1-5 to 1-10 for Interface Module configurations with Mainframes and Undercradles.

## Top Panel Label

Shown below is the Top Panel Label and removable LED Label for the J3446C.

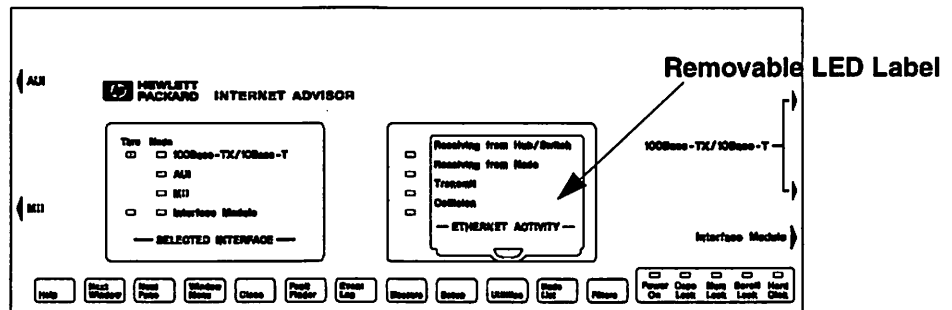


Figure 4-3: J3446C Top Panel Label

---

## **Standard Connectors**

The HP J3446C Internet Advisor comes with standard connectors for:

- AUI - 100Base-T
- MII - 100Base-T
- MDI - 100Base-TX/10 BASE-T

For pin assignments please see Appendix E.

5

**HP J3754C**


## What's in this Chapter

Hardware Features .....	5-3
Top Panel Label .....	5-5

---

## Hardware Features

Figures 5-1 and 5-2 show the locations of the various connectors and plug-in features of the HP J3754C pcAdvisor.

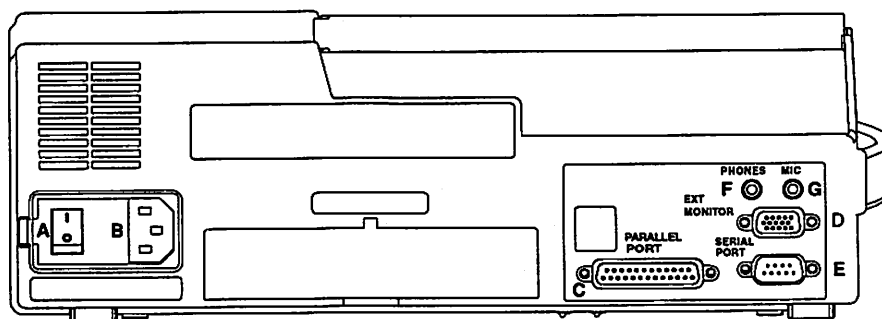


**Figure 5-1: Left side of HP J3754C pcAdvisor**

The left side of the HP pcAdvisor contains the following:

- A. On-Off Switch
- B. Power cable receptacle
- C. Parallel Port
- D. External Monitor
- E. Serial Port
- F. Headphones
- G. Microphone

**HP J3754C**  
**Hardware Features**

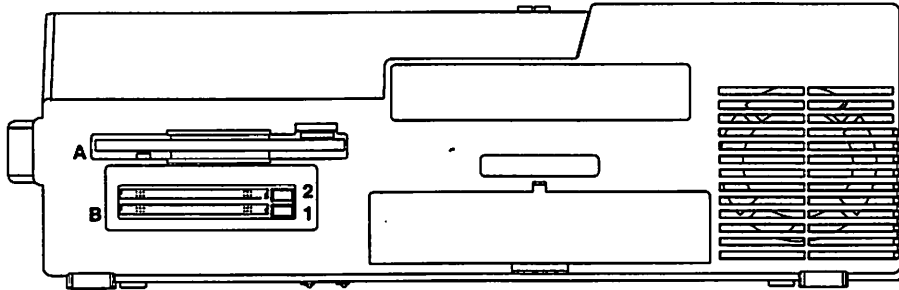

**Figure 5-2: Right side of the HP J3754C pcAdvisor**


The right side of the HP pcAdvisor contains the following:

- A. 3-1/2 inch high density flexible disk drive
- B. Dual PC Card slots

---

## Top Panel Label

Shown below is the Top Panel Label for the J3754C.

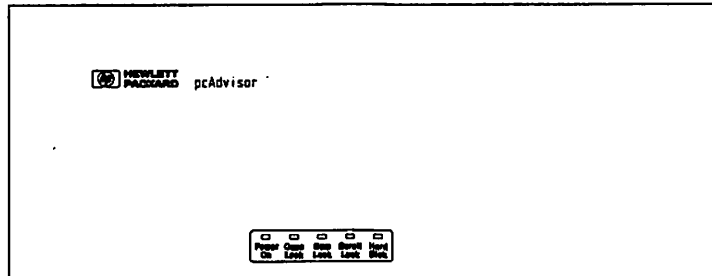

**Figure 5-3: J3754C Top Panel Label**



HP J3754C  
Top Panel Label

---

**Interface Modules**

## What's in this Chapter

Interface Modules and Filler Panel .....	6-3
Install into a Mainframe .....	6-3
Remove from a Mainframe .....	6-4
Install or Remove from an Undercradle .....	6-6

---

## Interface Modules and Filler Panel

There are several Interface Modules and one Filler Panel available for use with the HP Internet Advisor. The Filler Panel acts as a cover for the Interface Module slot when no Interface Module is installed.

See Chapter 1, page 1-5 to 1-10 for Interface Module configurations with the Internet Advisor and Undercradles.

---

### Install into a Mainframe

---

#### **CAUTION**

---

The HP Internet Advisor must have the power turned off whenever you are installing or removing any HP Interface Module.

#### **To install an Interface Module or Filler Panel:**


1. Make sure the Module Release Latch is in the Install/Remove Position.
2. Slide the Interface Module or Filler Panel into the opening of the HP Internet Advisor.
3. Push it firmly into place until it is seated and the Module Release Latch moves to the Locked Position (however, the Module Release Latch doesn't move when you install a Filler Panel). You will need to push the Module Release Latch with your thumb to get the latch into its locked position.

---


## Remove from a Mainframe

To remove an Interface Module or Filler Panel:


1. Depress the left end of the Module Release Latch (labeled "PUSH TO UNLOCK,") then slide the latch toward the left (Install/Remove Position).
2. Pull the Interface Module or Filler Panel out of the HP Internet Advisor.

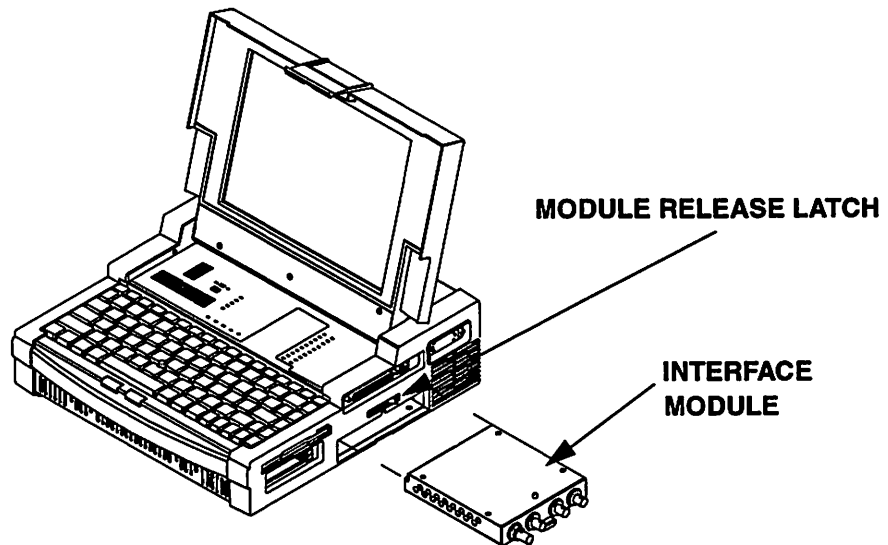

**Figure 6-1: Install or Remove an Interface Module from J2300C**

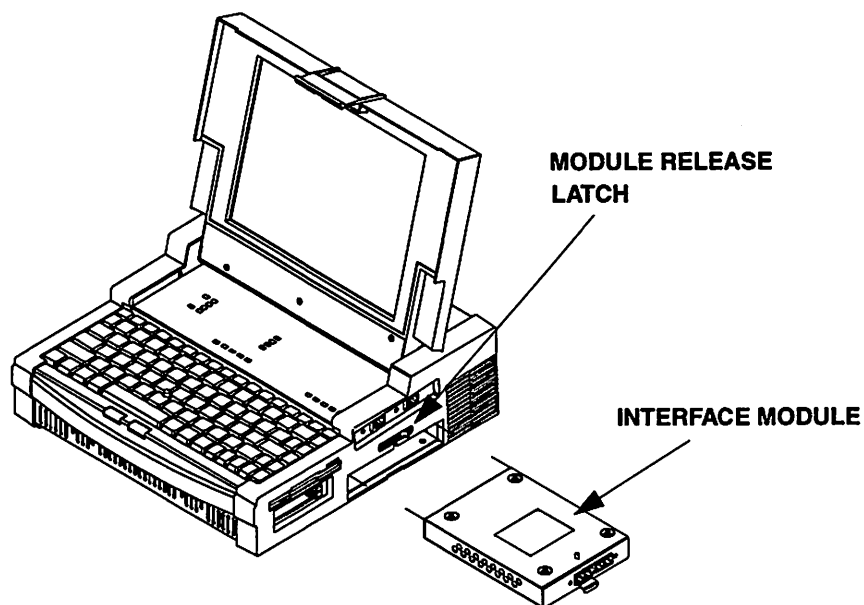

**Figure 6-2: Install or Remove an Interface Module from J3446C**

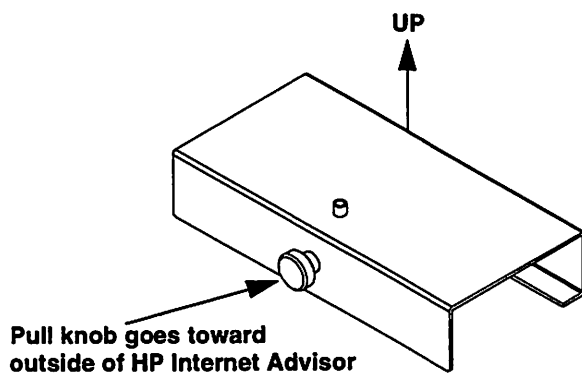

**Figure 6-3: Install or Remove Filler Panel**

---


## Install or Remove from an Undercradle

**To install an Interface Module into an undercradle:**

1. Slide the module into the opening of the undercradle.
2. Push it into place until it is seated. See the following figure for more details.


**To remove an Interface Module from an undercradle:**

1. Slide the Module Release Latch towards the left.
2. Pull the Interface Module out of the undercradle.

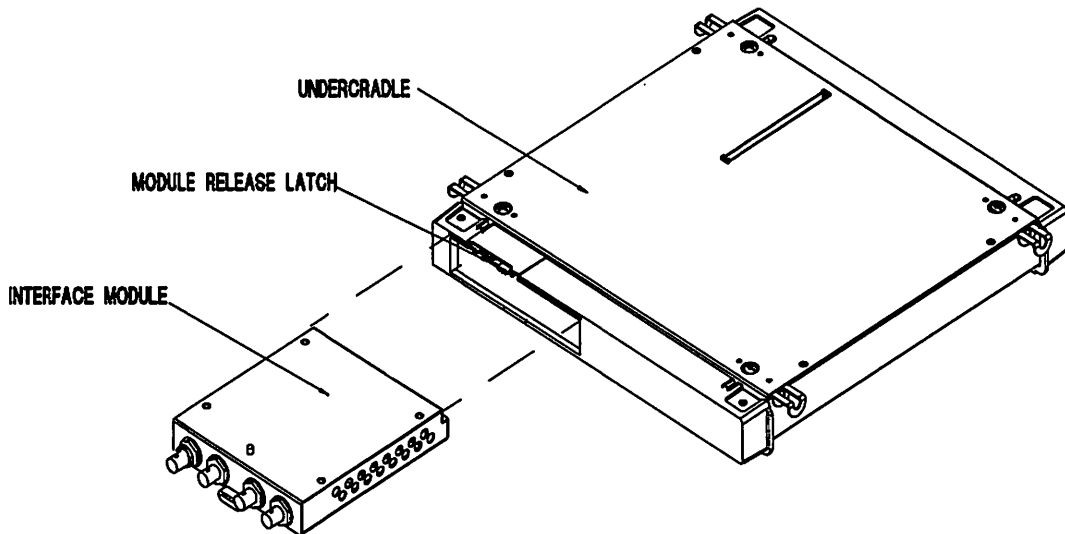

**Figure 6-4: Install or Remove Interface Module - Undercradle**

3. Slide the metal plate over to the next set of drilled holes in the metal plate and reattach it (with the same screws you removed in the previous step). This will leave an opening for your connector board to be installed into. After installing the screws, they should be flush with the metal plate. See the following figure.

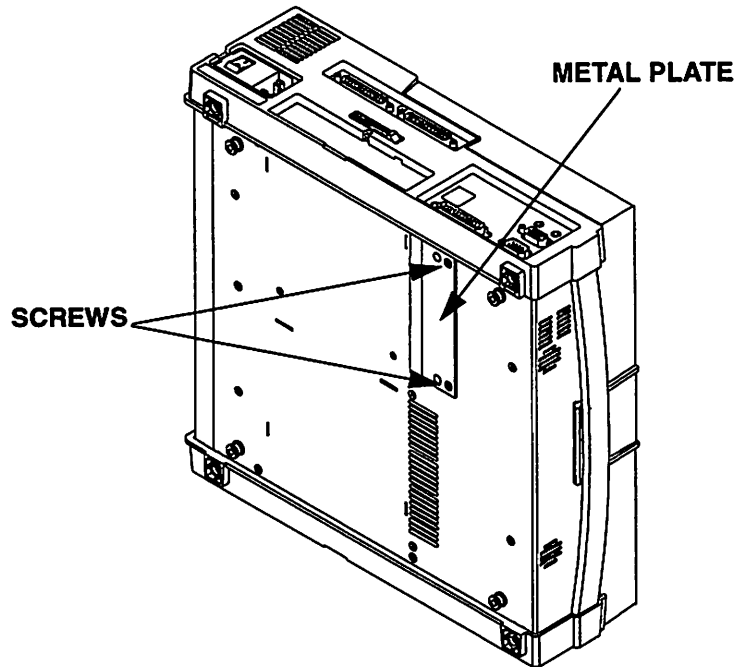


**Figure 7-1: Location of metal plate and screws**



## Undercradles

### Attaching the Undercradle

4. Insert the connector board into the slot uncovered by the metal plate.
5. Make sure all four silver tabs on the top of the Undercradle are pulled out.
6. Place the HP Internet Advisor on top of the Undercradle, matching the connector on the bottom of the HP Internet Advisor to the connector on the top of the Undercradle.
7. Push in the four silver tabs, locking the Undercradle to the HP Internet Advisor.

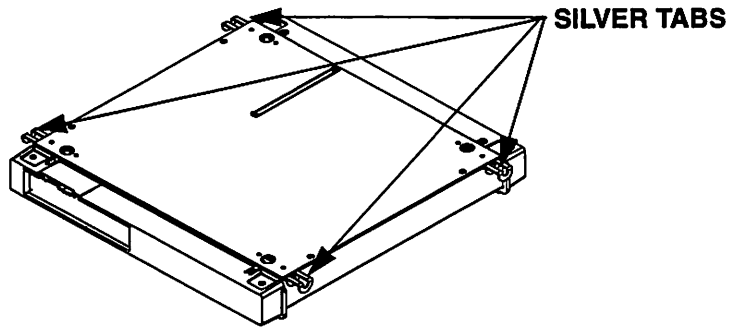

**Figure 7-2: Location of silver tabs**

---

## Removing the Undercradle

1. Turn off power and unplug the HP Internet Advisor.
2. Pull out the four silver tabs on the front and the back of the Undercradle.
3. Lift the HP Internet Advisor away from the Undercradle.

---

### **WARNING**

---

The HP Internet Advisor must have the power turned off whenever you are installing or removing any HP Undercradle.

---

## The Empty Undercradle HP J2295A

The empty Undercradle (J2295A) is available which lets you add one or two of your own ISA compatible printed circuit cards to customize your HP Internet Advisor.

---


### WARNING

---

Be sure the HP Internet Advisor is turned off and disconnected from any power source before you begin any assembly or disassembly procedures.

### Left Side of Undercradle


The Undercradle left side is the plastic piece with indented slots. Note the top of the left side has open slots, and the bottom has rubber foot indentations.

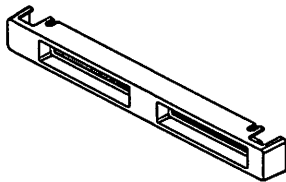

**Figure 7-3: Left Side of Undercradle**

### Right Side of Undercradle


The Undercradle right side is the plastic piece with two large cutouts. Note the top of the left side has open slots, and the bottom has rubber foot indentations.

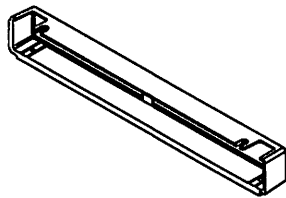

**Figure 7-4: Right Side of Undercradle**

## Right Side Endcap Expander


The Undercradle right side endcap expander is the plastic insert that goes into the right side if you are using full-length printed circuit cards.

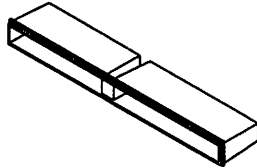

**Figure 7-5: Right Side Endcap Expander**

## Right Side Flat Endcap


The Undercradle right side flat endcap is the flat piece of metal that goes into the right side if you are using smaller size printed circuit cards.

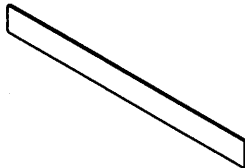

**Figure 7-6: Right Side Flat Endcap**

## Undercradle Bottom


The Undercradle bottom is the metal part with four metal standoffs that hold the connector board. Note the front of the Undercradle bottom is the curved edge nearest to the standoffs.

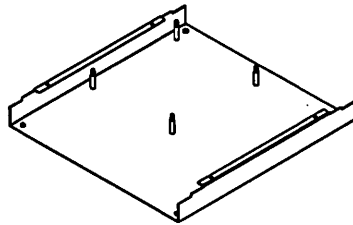

**Figure 7-7: Undercradle Bottom**

## Undercradle Top


The Undercradle top is the metal part with a slot and four silver tabs. Note this slot goes over the connector board which attaches to the HP Internet Advisor.

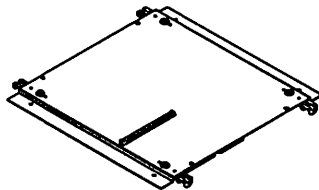

**Figure 7-8: Undercradle Top**

## Connector Board

The connector board is where the printed circuit cards connect. It pushes on and off the standoffs in the Undercradle bottom.

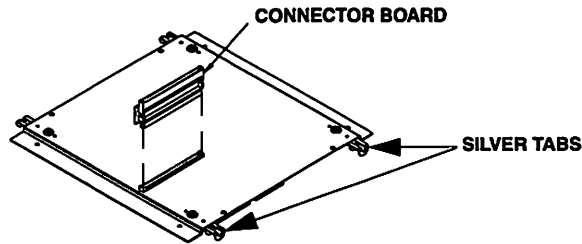

**Figure 7-9: Connector Board**

## Silver Tabs

The four silver tabs connect the Undercradle to the HP Internet Advisor.

---

## **Taking the Undercradle Apart**

---

### **WARNING**

---

Be sure the HP Internet Advisor is turned off and disconnected from any power source before you begin any assembly or disassembly procedures.

1. Remove the Undercradle from the HP Internet Advisor if it is attached. (See previous sections.)
2. Turn the Undercradle upside down, with the four black feet facing up.
3. Carefully remove the four black rubber feet using a small flat screwdriver or some implement to pull them out of their seating.
4. Remove the four screws using a #10 Torx driver.
5. Turn the Undercradle over.
6. Remove the eight screws (four flat-head and four pan-head) from the top of the Undercradle.
7. Slide the two plastic endcaps off both sides, and lift off the top of the Undercradle.

---

## **Installing printed circuit cards**

You can install up to two printed circuit cards in the Undercradle. They can be full-length or smaller. If you are using full-length cards, you will need to use the endcap expander. If you are installing smaller cards or only one card, you can use the flat endcap.

---

### **CAUTION**

---

Be sure to follow Electro-Static Discharge (ESD) procedures when handling any cards.

With the Undercradle disassembled:

1. Gently lift each corner of the connector board to disconnect it from the standoffs.
2. Turn the connector board over and fasten the card(s) in the slots provided.
3. Press the connector board onto the standoffs. The cards should be underneath the connector board as you secure it.


---

## Putting the Undercradle Back Together

1. Place the top back on the Undercradle, aligning the slot in the top with the HP Internet Advisor connector. Fasten with the four flat-head screws.
2. On the side nearest to the HP Internet Advisor connector, slide the left side piece into place and secure it with four pan-head screws (two on the top and two on the bottom). If you are only installing one printed circuit card, you need to insert the small flat endcap in the left side piece before you put it on the Undercradle.
3. If you are installing full-length printed circuit cards in the Undercradle, you need to insert the endcap expander into the right side before you place it on the Undercradle. If you are installing smaller printed circuit cards, you will need to insert the flat metal endcap in the right side before you place it on the Undercradle.
4. Slide the Undercradle right side piece into place and secure it with four pan-head screws (two on the top and two on the bottom).
5. Turn the Undercradle over and replace the four black rubber feet into the foot indentions.



**Undercradles**  
**The Empty Undercradle HP J2295A**

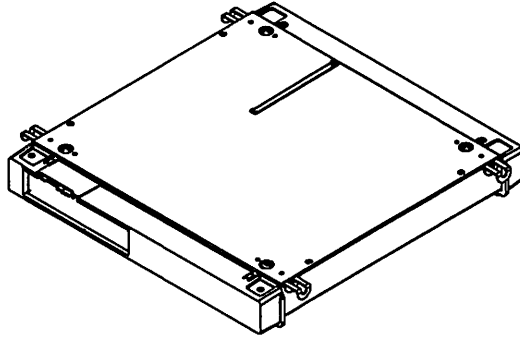

**Figure 7-10: The Assembled Undercradle**

---

## **Modem & Ethernet PC Cards**

## What's in this Chapter

Introduction .....	8-3
Compatibility .....	8-3
PC Card General Tips .....	8-4
Insertion and removal of the PC Card .....	8-5
Installing a PC Card .....	8-5
Process to remove a PC Card .....	8-6
System Identification of PC Card .....	8-6
Properties of a PC Card operating with Windows 95 .....	8-7
Installing Modem or Ethernet PC Card Drivers .....	8-7
Software Configuration .....	8-9
Modem PC Cards .....	8-13
Modem PC Card setup in HP Toolkit .....	8-14
10/100 Ethernet PC Card Adapter .....	8-16
10/100 Ethernet PC Card Documentation .....	8-17

---

## Introduction

The Personal Computer Memory Card International Association (PCMCIA) has created a standard for credit card size devices with memory, mass storage, and I/O functionality. The standard makes compatibility possible by defining mechanical, electrical, and software requirements.

The purpose of the PC Card slots are to increase the flexibility in the Personal Computer section of the instrument. The primary use of this flexibility is for enhanced I/O capability with the HP Internet Advisor's software. This includes functions such as a modem, a LAN interface, and a CD-ROM Drive.

While integrated I/O is the primary focus for the PC Card slot, it can also serve other purposes. Other PC Card solutions include removable mass storage, speech, paging, encryption, global positioning, and even additional protocol testing.

---

## Compatibility

The HP Internet Advisor conforms to PC Card specification 2.10. Each slot is capable of receiving one Type I or Type II card. A single Type III or larger card may be inserted into the bottom slot only. The following kinds of cards are compatible with the HP Internet Advisor:

- ATA Drive
- Audio
- Ethernet/Modem Combo
- Fax/Modem
- Network Interface
- SCSI Host Adapter
- CD ROM

---

## PC Card General Tips

- Make sure the PC Card slot is active by selecting: | Start | Settings | Control Panel | and then double-click on the PC Card (PCMCIA) Wizard. If the slots are active you'll see the PC Card (PCMCIA) Properties window. If the slot is not active, you'll see the PCMCIA Welcome window. At the welcome window, press **ENTER** to continue, press **ENTER** to accept default PC Card drivers, then press **ENTER** to close the PC Card Wizard.
- Make sure the PC Card is plugged in all the way by listening for a beep. If you do not hear a beep, the card may be upside down.
- Do not load the card vendor's socket or card services software into HP Internet Advisor LAN or HP ToolKit WAN.

---

### NOTE

The configuration will be different in some ways for the HP Internet Advisor WAN software versus the HP Internet Advisor LAN software. Refer to your *HP Internet Advisor WAN - High Speed Toolkit User's Guide* (under *Configuring a Slave*) for configuring HP Internet Advisor software for WAN PC Card Operation.


Refer to either the *HP Internet Advisor LAN - PC Remote User's Guide* or *HP Internet Advisor - Remote for Unix®*, for configuring LAN Remote PC Card operations.

---

---

## Insertion and removal of the PC Card

The PC Card slots are located on the right side of the HP Internet Advisor, below the flexible disc drive as shown in the following figure.

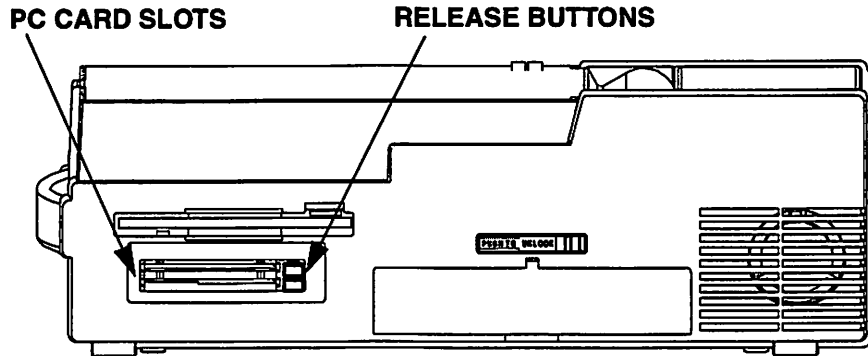

**Figure 8-1: Location of PC Card Slots**

---

## Installing a PC Card

All PC Cards are keyed for correct installation. The card's label will typically face up or will explain which side is up. Slide the PC Card in the PC Card slot until you feel some resistance. Then push firmly, but gently, to ensure a good connection. Never attempt to force the card into position. When using Windows 95, you should hear an audible double-beep tone within five seconds, confirming that the system recognizes a PC Card has been inserted.

---


### NOTE

When using the alternate boot selection, which operates in MS-DOS mode, install your PC Card before you apply power to the HP Internet Advisor.

---

## Process to remove a PC Card

In Windows 95, select the PCMCIA icon (located in the Notification area near the clock), then highlight and click the Stop PCMCIA card description. This brings up a message box telling you that you may now safely remove the PCMCIA device.

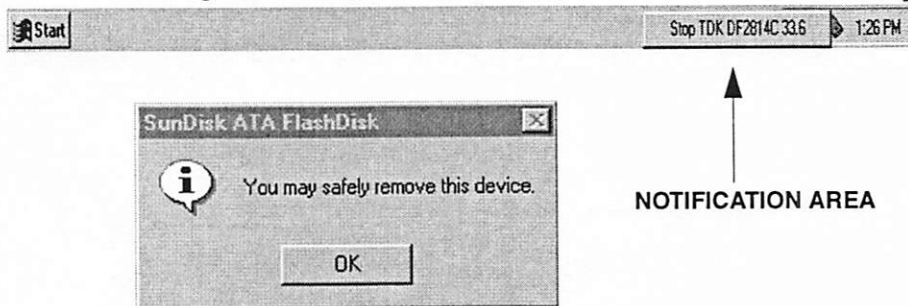

**Figure 8-2: Remove PC Card**

Another method to remove the PC Card is to exit your current applications, shut down Windows 95, and then remove the PC Card.

The PC Card is removed from the slot by simply pushing in the release button and pulling the card out.

---

### NOTE

When using the alternate boot selection, which operates in MS-DOS mode, turn the power off to the HP Internet Advisor before removing your PC Card.

---

## System Identification of PC Card

Besides hearing an audible beep, indicating insertion and removal of cards, you can verify that the PC system has properly identified the card in Windows 95 by checking the system properties of the PC Card.

## Properties of a PC Card operating with Windows 95

From Windows 95, the system properties of PC Cards can be verified. Select: | Start | Settings | Control Panel | System I. From the Systems Properties window, select: | Device Manager |, select your PC Card device category and then double-click on PC Card description. This process brings up the PC Card Properties screen. From this screen, you may check General or Resources for your PC Card.

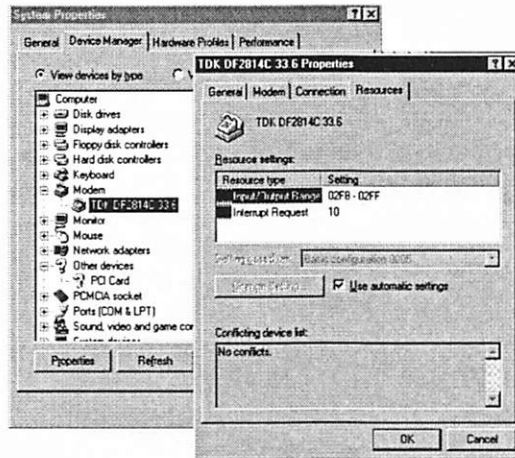


Figure 8-3: System Properties

---

## Installing Modem or Ethernet PC Card Drivers

If you are using a supported Modem or NIC PC Card, the drivers for these devices are installed on your Internet Advisor. If you are using an “unsupported” device, the following describes the process to install any necessary drivers.





## Modem & Ethernet PC Cards

### Introduction

1. The first time Windows 95 locates your “unsupported” PC Card, it must install the drivers for that card. Follow the instructions as directed from the following screens.

Examples of the following screens will be shown. Select OK to continue.

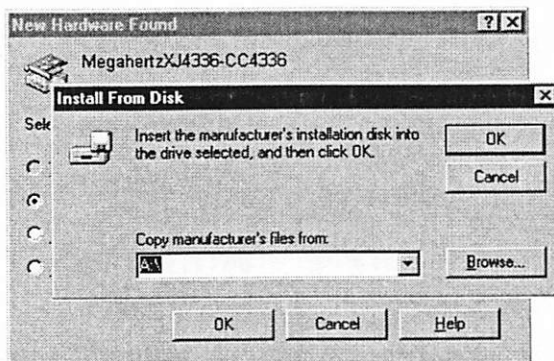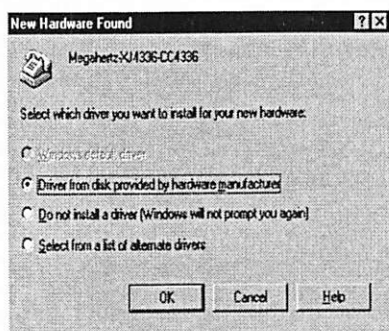

**Figure 8-4: New Hardware Found**

---

## Software Configuration

### Windows 95 with a PC Card

- If a PC Card uses an interrupt, Windows 95 will assign interrupt 11 to the card if it is available. If this interrupt is not available, Windows 95 will assign the next available interrupt.
- If a PC Card uses I/O Addresses, Windows 95 will dynamically allocate the next free range to the card. If the PC Card is a modem card, Windows 95 must select an I/O Addresses range of COM 1, COM 2, COM 3, or COM 4. Generally, Windows 95 will use COM 2. A Network PC Card will normally default to 130-13F.
- In Windows 95 environment, PC Card Modems are generally located at I/O address 02F8-02FF(COM2), with interrupt=11.
- ATA disks use available I/O space and reserve no interrupt.

## **Modem & Ethernet PC Cards**

### **Introduction**

#### **Windows 95 MS-DOS Compatibility Mode with a PC Card**

The only PC Cards supported in HP Toolkit are: U.S. Robotics Megahertz PC Card Modem (model XJ4336) and TDK Systems PC Card Modem (model DF2814CX).

The default modem for Mainframes is the TDK Modem. If you want to change the default modem for HP Toolkit, select from the  
Start Menu: | Utilities | Select Modem for HP Toolkit Remote |.

A point enabler is used to activate each modem for use with the HP Toolkit Remote package. Both modems are set for I/O space COM4, Interrupt 11, and memory region CC000-CCFFF.

The only PC Card supported for the HP Internet Advisor LAN is Xircom CE3 10/100 Ethernet PC Card. To use this PC Card, a separate LAN Remote package must be properly installed.

In Windows 95 MS-DOS Compatibility Mode, you may need to reference the following tables, which list the interrupt structure and I/O space of the HP Internet Advisor:

**Table 8-1: Interrupts**

PC Functions	Interrupt	Analyzer Functions	Interrupt
Keyboard Controller	1	LAN Advisor Undercradle	10
Programmable Interrupt Controller	2	FDDI Advisor Undercradle	plug & play
COM 1	4	High Speed Acquisition Undercradle	none
Sound Hardware	5	TIMS Undercradle	15
Flexible Disk Controller	6	T1 Telco Undercradle	15
LPT1/Parallel	7	E1 Telco Undercradles	15
Real Time Clock	8		
Button Mouse	12		
Numeric Data Processor	13		
Hard Disk Controller	14		
Available to PC Card in Internet Advisor WAN	9,10,11		
Available to Undercradle in Internet Advisor WAN	9,10,11,15		

**Modem & Ethernet PC Cards  
Introduction**

**Table 8-2: I/O Address Space**

<b>I/O Address</b>	<b>System/Analyzer Function</b>	<b>I/O Address</b>	<b>System/Analyzer Function</b>
000-00F	DMA Controller Register	300-301	Sound H/W
020-021	PIC #1	320-32F	WAN Low Speed Hardware
040-043	Prog. Interval Timer Reg	330-331	T1 Telco Undercradle
060-	Keyboard Controller	330-33F	TIMS Undercradle
061-	System Speakers	376-377	IDE
064-	Keyboard Controller	378-37F	LPT1/Parallel
070-	RTC Index & NMI Mask	388-38B	Sound H/W
071	RTC Data Port	3B0-3BB	Video Registers
080-09F	DMA Page Register	3C0-3DF	Video Registers
0A0-0A1	PIC #2	3E0-3E1	PC Card Controller
0C0-0DF	DMA Controller Register	3E8-3EF	COM3
0F0-0FF	Numeric Data Processor	3F0-3F7	Flexible Disk Controller, Primary
110-12F	ATM Analyzer in Undercradle	3F8-3FF	COM1
150-16F	WAN/ATM Analyzer Hardware	B2-B3	Power Management
170-177	IDE	CF8-CFF	Chipset Configuration
1F0-1F	IDE	C2F0	LAN Hardware
200	Sound H/W	D2F0	LAN Hardware
220-22F	Sound H/W	E2F0	LAN Hardware
2E8-2EF	COM4		
2F0-2F1	LAN Analyzer Hardware		
2F8-2FF	COM2		

---

## Modem PC Cards

**Initializing the modem for Internet Advisors with factory installed software:**  
If your HP Internet Advisor software was installed at the factory, you do not need to setup the modem in Windows 95. However, you will need to set your Dialing Preferences for your modem to operate properly.

- Set these preferences from the Start menu by selecting: | Settings | Control Panel | Modems |.
- Under General Modems Properties, select Dialing Properties. This opens another folder called, My Locations. The default area code from the factory is set at area code 719 and country USA. Change these and any other settings to meet your requirements.

---

### NOTE

The modem requires an analog phone line and is not compatible with typical digital PBX systems.

The modem can be connected to a standard telephone line through an RJ-11 phone jack.

Transmission rates for the modem are up to 33.6 kbps (14.4 kbps for fax). The modem and fax operate with standard AT commands.

The modem is compatible with many commercially available software applications. Check the vendor's specifications to see if a particular application is compatible with the modem's capabilities.

Refer to the Modem User's Guide for information concerning available international telephone adaptors.

---

## Modem PC Card setup in HP Toolkit

You can use the PC Card Modem for remote control of the HP Toolkit WAN. To do so, you must configure the HP Internet Advisor software for COM port 4 and Interrupt 11. The master controller configuration menu (shown in Figure 8-5) is reached by selecting the Remote Control option in the Toolkit Main Group.

The slave configuration menu (shown in Figure 8-6) is reached by pressing **F4** (Slave Setup) softkey from within the Toolkit Main Group. Changing one configuration automatically changes the other. The exact settings should be as shown in the following figures.

Helett-Packard Remote Controller A.84.81 Wed May 21 15:38:18 1997

Remote Configuration

Modem Command Set	Hayes
Emulation	On
Phone Type	Touch Tone
Baud Rate	9600bps
Com Port	OTHER
Hardware Handshaking	Off
Com Base	744
IRQ (2-15)	11

1 Phone Book 2 3 Call Remote 4 5 6 7 8 9 0 Exit

**Figure 8-5: Remote Configuration screen**

The COMM 4 I/O Base address of 2E8 Hex has a decimal equivalent of 744.

Hewlett-Packard		Toolkit Revision A.07.00		Wed May 21 15:31:24 1997	
Slave Setup					
Modem Command Set	Hayes		[a] COM1 [b] COM2 [c] COM3 [d] Other		
Auto Answer	On				
Hardware Handshaking	Off				
Baud Rate	9600bps				
Com Port	Other				
Com Base	744				
IRQ (2-15)	11				
1 Con Window   2   3   4   5   6   7   8   9   1 Exit   0 Setup					

**Figure 8-6: Slave setup**

The other settings in the menus depend on the type of modem. However, it is recommended that you leave AutoAnswer ON when modifying the slave setup. This lets the instrument be remotely captured in an unattended setting.



---

## 10/100 Ethernet PC Card Adapter

The HP Internet Advisor LAN can function as a station on the network using the 10/100-Ready Ethernet PC Card Adapter for 10Base-T or 100Base-TX networks. This card is primarily used as the network connection when operating the analyzer remotely. It can also be used as a standard network interface for any other operation using the DOS platform such as file transfer and electronic mail.

This card uses the following hardware configuration:

- Interrupt request line: IRQ 9
- IO address: 300-31F Hex
- DMA channel: 5

This configuration should not be changed.

Refer to either the *HP Internet Advisor LAN - PC Remote User's Guide* or *HP Internet Advisor - Remote for Unix®*, for more information on configuring LAN Remote PC Card operations.

---

### NOTE

When performing a warm boot (Ctrl-Alt-Delete) of the system with the Xircom CE3 10/100 Ready CreditCard Ethernet Adapter inserted into the PC Card slot, the system may "lock up" Windows 95. We recommend a power-down of the system to restore functionality. From a cold boot (i.e.: from a powered-down status), the presence of the Xircom adapter in either of the PC Card slots will have no adverse effect and the system will power up and perform normally.

---


---

## 10/100 Ethernet PC Card Documentation

The 10/100 Ethernet PC Card documentation files can be located by selecting:

| Start | Programs | Xircom Online Documentation |

From this point, you can select either the Quick Install Guide or the User's Guide.

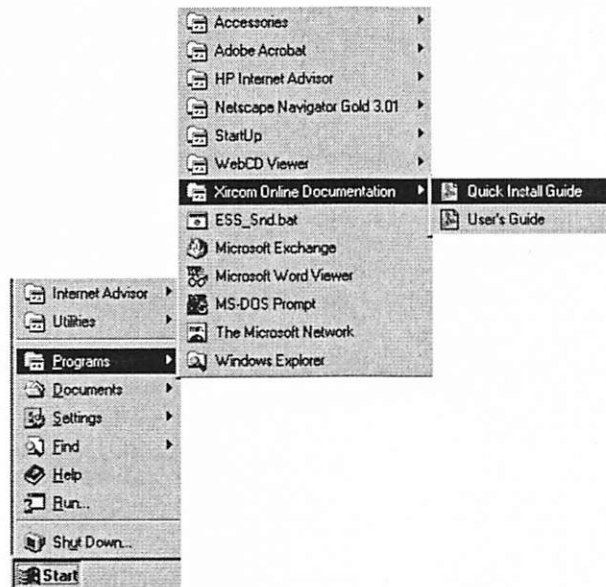

**Figure 8-7: The 10/100 Ethernet PC Card documentation files**

---

### NOTE

Activate the w.e.t. support which installs Adobe Acrobat. This enables you to view the 10/100 Ethernet PC Card documentation files using Adobe Acrobat Reader.

---

**Modem & Ethernet PC Cards**  
**10/100 Ethernet PC Card Adapter**

---

A

---

**Software**

# What's in this Appendix

HP Internet Advisor Family of Products Software . . . . . A-3

---

## HP Internet Advisor Family of Products Software

The HP Internet Advisor Family of Products are shipped with 9.7 (or greater) software installed on the hard drive. Also included with each order is the HP Internet Advisor Literature package which includes backup software and Windows 95 software.

- The HP Internet Advisor Family of Products are not compatible with any disk compression packages. Likewise, do not use disk compression on flexible disks in any unit.
- If you run the Windows 95 program Scantiest, it will give you an error message stating there are file names longer than 66 characters. Ignore the error message and continue with the Scandisk program.
- Please see the HP Software License Agreement.

Software  
**HP Internet Advisor Family of Products Software**

---

B

---

**Specifications**



What's in this Appendix

Physical Characteristics ..... B-3  
Operating Conditions ..... B-5  
Safety Conditions ..... B-6  
Additional Help..... B-6

---

## Physical Characteristics

### Weight:

J2300C Mainframe	6.45 kg (14.2 lbs)
J3446C Mainframe	6.81 kg (15 lbs)
J3754C Mainframe	5.90 kg (13 lbs)
J2295A Undercradle	1.04 kg (2.3 lbs)
J2306B Undercradle	1.40 kg (3.1 lbs)
J2307A Undercradle	1.40 kg (3.1 lbs)
J2309B Undercradle	1.40 kg (3.1 lbs)
J2524A Undercradle	2.0 kg (4.4 lbs)
J2527A Undercradle	1.49 kg (3.3 lbs)
J2900A Undercradle	2.0 kg (4.4 lbs)
J3444A Undercradle	2.08 kg (4.6 lbs)
E4594A Undercradle	1.97 kg (4.35 lbs)

### Dimensions:

J2300C, J3446C, J3754C Mainframe	10.16H x 31.43W x 31.75D cm (4.0H x 12.375W x 12.5D inches)
Undercradles (exceptions noted)	3.7 cm (1.5 inches) height for undercradle
J3444A Undercradle J2527A TIMS Undercradle	4.76 cm (1.875 inches) height for undercradle
E4594A TELCO Undercradle	5.72 cm (2.25 inches) height for undercradle

**Specifications**  
**Physical Characteristics**

**Display:**

The standard display for the HP J2300C Internet Advisor is a 26.5 am diagonal (10.4 inch) passive DSTN color LCD VGA. Also available is Option 221 for J2300C which is a 26.5 am diagonal (10.4 inch) active matrix TFT color SVGA display.

The standard display for the HP J3446C and J3754C Advisor is a 26.5 am diagonal (10.4 inch) active matrix TFT color SVGA display.

---

## Operating Conditions

### Temperature:

Operating	+5°C to +40°C (+41°F to +104°F)
Non-operating	-25°C to +60°C (-13°F to +140°F)

### Humidity:

Operating	20% to 80% relative humidity non-condensing to 40°C
Storage	10% to 90% relative humidity to 60°C

### Altitude:

Operation	4,575 meters	(15,000 feet)
Storage	15,250 meters	(50,000 feet)

### Power Requirements:

External:	100 to 240 VAC
	50 to 60 Hz, 110 Watts max.

---

## Safety Conditions

This instrument is designed for indoor use.

### Safety Class I

For continued protection from electrical shock, power cord ground must not be defeated.

**Product Damage.** Do not use this product when the product:

- shows visible damage,
- fails to perform,
- has been stored in unfavorable conditions, or
- has been subject to severe transport stresses.

If any of the above statements are met, make the product inoperative and secure it against any unintended operation. Please contact the U.S.A. Technical Response Center at 1-800-698-0061 for assistance.

---

## Additional Help

If you have questions, concerns or need more information, call or contact us:

In the U.S.A.:

U.S.A. Technical Response Center - 1-800-698-0061  
by FAX - 303-754-4802

Internationally:

by calling your local HP Sales Office

On the Web:

<http://www.hp.com/go/internetadvisor>

---

C

---

**Windows 95 Operating System**

## What's in this Appendix

Operating System .....	C-3
HP Toolkit (HP Internet Advisor WAN) .....	C-3
HP Internet Advisor LAN .....	C-3
Installing Windows 95 Applications .....	C-4

---

## Operating System

The HP Internet Advisor Family of Products use the Microsoft® Windows®95 operating system. Windows 95 can operate in either Graphical User Interface (GUI) mode or Windows 95 MS-DOS Compatibility Mode (MS-DOS mode).

The HP Internet Advisor uses GUI mode to run all of its applications except HP Toolkit and HP Internet Advisor LAN which run in MS-DOS mode.

---

### HP Toolkit (HP Internet Advisor WAN)

HP Toolkit (HP Internet Advisor WAN) operates in MS-DOS mode, but can be started from the Windows 95 Start menu. When a HP Toolkit application is selected from the Start menu, you are warned that the system will be switched to MS-DOS mode. After you acknowledge this, the system unloads the GUI portion of Windows 95, enters MS-DOS mode and starts HP Toolkit. When you exit the Toolkit (F10) the system reloads the GUI portion of Windows 95. While in Toolkit, you can go to the command prompt using the F1 key.

---

### HP Internet Advisor LAN

The HP Internet Advisor LAN operates in MS-DOS mode. The HP Internet Advisor LAN cannot be run in Enhanced Mode; therefore, a different set of system files must be used to start the HP Internet Advisor LAN application.

When a HP Internet Advisor LAN application is selected from the Start menu, you are warned the system will be switched to MS-DOS mode. After you acknowledge this, the system goes to the Windows 95 command line prompt. The system files needed to run HP Internet Advisor LAN under MS-DOS mode are copied over the existing system files and then the system is restarted. This sequence take you to MS-DOS mode, restores the system files used to start Windows 95, and then starts the HP Internet Advisor LAN. When you exit HP Internet Advisor LAN, the system is restarted and returns to Windows 95.



## **Installing Windows 95 Applications**

There are two copies of the Config.sys and Autoexec.bat files which are used to start Windows 95. One copy of each file is located in the root directory of drive C: and the other copies are located in C:\Boot\_src\Default.

In the process of installing other Windows 95 applications or software, if you need to make changes to either the Autoexec.bat or Config.sys files of Windows 95, you will need to make the same changes to the copies of these files in the Default directory for your Internet Advisor to operate properly.

If you need to edit either of these files, follow this process to keep the two sets of files in synch. If the file sets get out of synch, prior changes may be lost when you run a MS-DOS mode application and then return to Windows 95.

The following process will guide you through the necessary steps to update the Autoexec.bat, Config.sys and Default directory files.


Select the My Computer icon which opens to this window.

Double-click on Advisor (C:). This opens up a view of your C: drive.



**Figure C-1: View of C: drive**


To edit either your Autoexec.bat or Config.sys for Windows 95, select:  
| Start | Programs | Accessories | Notepad |.

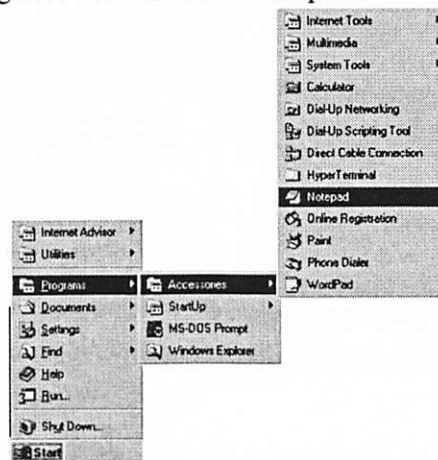

**Figure C-2: Opening Notepad**


## Windows 95 Operating System Operating System

Drag and Copy (using the left mouse button) either your Autoexec.bat or Config.sys to the Notepad. Make your edits, save the edited file and exit Notepad.

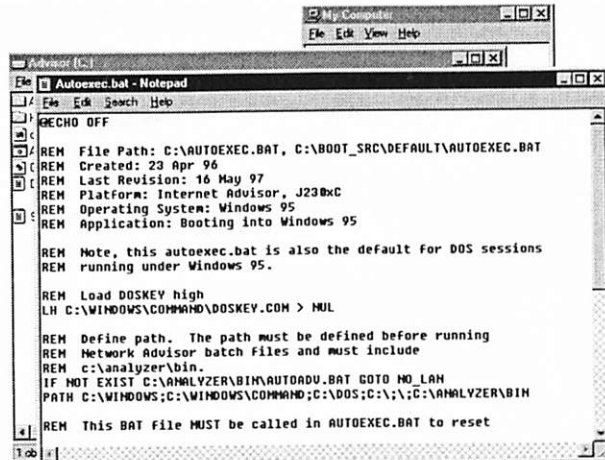


**Figure C-3: Making edits in Notepad**

From Advisor (C:), double-click on Boot\_src and double-click on Default to open window.

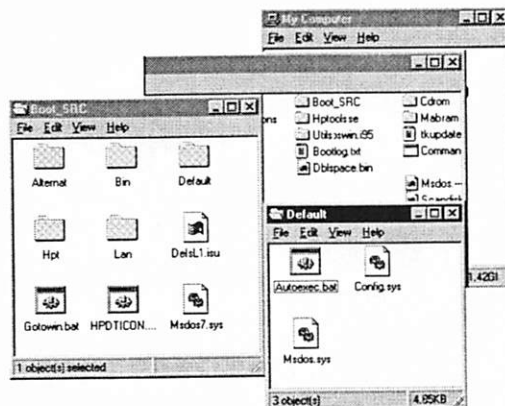


**Figure C-4: Opening Boot\_src and Default**

From Advisor (C:) copy the edited Autoexec.bat or Config.sys to C:\Boot\_src\Default by selecting the file you want to copy. Use File menu and select Copy (to copy the file) to the clipboard.

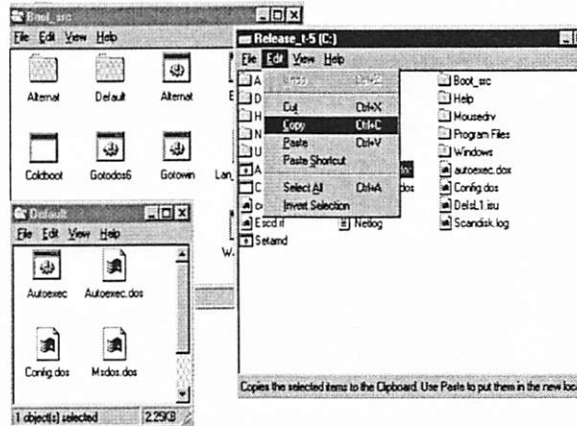

**Figure C-5: Copy file to clipboard**


To make your backup copy of the edited file, highlight C:\Boot\_src\Default, highlight the file you want to replace (Autoexec.bat or Config.sys), then select Paste. This places the edited Autoexec.bat or Config.sys file in the default file.

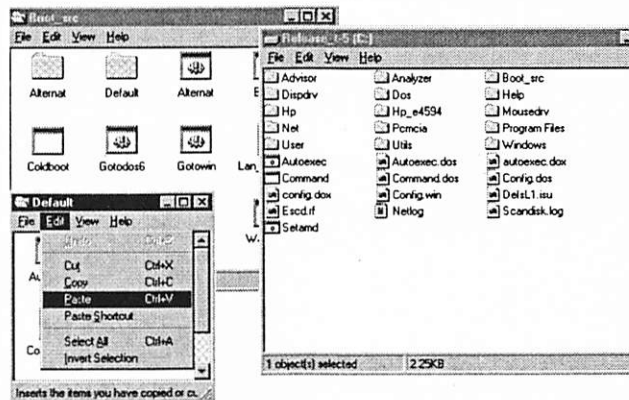

**Figure C-6: Paste file in Default**

## Windows 95 Operating System Operating System

This last step brings up a Confirm File Replace screen. If this is the file you want to replace, click Yes. You have now edited either your Autoexec.bat or Config.sys for Windows 95 and saved a backup copy of the file into C:\Boot\_src\Default. To activate these changes, you need to Shut Down Windows 95 and cycle the power off and then back on.

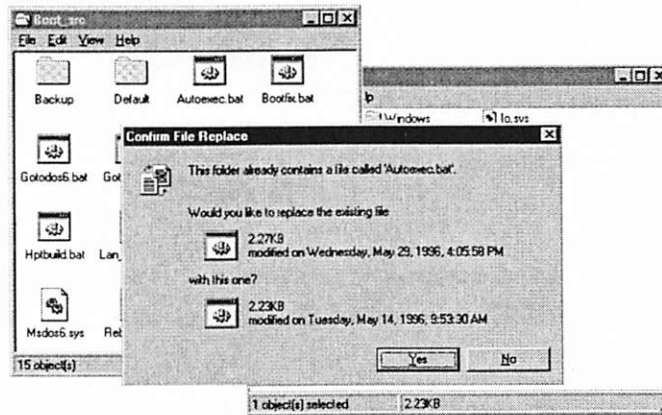

**Figure C-7: Confirm File Replace**

D

**PC Card Modem**

## What's in this Appendix

Overview of the Modem AT Command Set .....	D-3
PC Card Modem AT Commands and Descriptions .....	D-4

---

## Overview of the Modem AT Command Set

The standard AT Command Set is used by DTE's to communicate with modems. A typical command string begins with the ASCII "A" and "T" or "a" and "t." The modem uses these first two characters to determine the data rate, number of bits, and type of parity which the DTE is employing in its communication. The modem then buffers the commands string in its RAM (memory) until a carriage return, [CR], is transmitted. Once the [CR] is received, the modem begins to execute, in order, all of the commands in the string. The number of characters in this string should not exceed 40. If the modem encounters an illegal command, a command that cannot be executed, or more than 40 characters, it immediately aborts the execution of the command string and issues an ERROR message to the DTE. If the command string is correct, the modem executes all commands and sends an OK message to the DTE.

Many of the commands require a numeric parameter. If this parameter is missing, the modem automatically assumes that the parameter is 0, if appropriate. If the parameter exceeds the expected values, the modem either aborts and issues an ERROR or it extracts the modulus from the parameter based on the greatest expected value. (For example; if n is expected to be 0,1,2,3, then  $n=5$  will be treated as  $n=5\text{Mod}4=1$ .) This response varies from modem to modem.

Modems are always in one of two modes of operation. The modem enters into Data Mode once a connection has been established with a remote modem. In Data Mode, any data transmitted from the DTE to the modem is modulated and transmitted to the remote modem; and, similarly, any data that the modem transmits to the DTE has been received from the remote modem and demodulated. The modem can be in Data Mode only when the modem has established a communications link with a remote modem. The only exception to this is during diagnostic tests. At all other times, the modem is in Command Mode. When in Command Mode, the modem responds to AT commands issued from the DTE.

While in Data Mode, if it is necessary to issue commands to the modem without severing the communications link to the remote modem, an escape sequence may be issued from the DTE to the modem. The escape sequence consists of three escape characters followed by an AT command. If the modem uses a Hayes command set, the escape sequence must have a guard time before and after the



## PC Card Modem

three escape characters. The escape character is defined by register S2 (default is +, ASCII 043) and the guard time is defined by register S12 (default is 1 second, 50 x 0.02s). The default escape sequence is:

(1s) +++ (1s) AT...

Once the modem has been shifted into Command Mode during a data link, the modem can be returned to Data Mode with the O command.

---

## PC Card Modem AT Commands and Descriptions

The modem AT commands and descriptions are located in directory:  
c:/mhz

The modem AT commands/descriptions text file is located at:  
c:/mhz/rck-336.txt

Use the Notepad program to view or print this file.

---

E

---

**Breakout Box, LEDs & Connectors**

# What's in this Appendix

- RS-232/V.24 Breakout Box and System LEDs ..... E-3
  - Mark/Space Indicator ..... E-4
  - Source Voltage ..... E-5
  - Active Interface LEDs ..... E-5
- Lead Status LEDs ..... E-6
- V-Series Interfaces ..... E-7
  - RS-232C/V.24 ..... E-8
  - RS-449 ..... E-9
  - V.35 ..... E-10
  - Interface Pin-Out Comparison ..... E-11
- AUI - 100Base-T ..... E-13
- MII - 100Base-T ..... E-14
- MDI - 100Base-TX ..... E-15



The vertical switch bank provides hardware isolation of incoming or outgoing data and control signals for special purpose testing. An example would be using the Internet Advisor to supply terminal generated control signals without conflicting with existing data signals. In this case, you would want to open the DTE switch to isolate the circuit being tested from the internal data transmitter.

---

**NOTE**

Pin 1 of the RS-232 test port is Frame Ground or Protective Ground. It is connected to the case of the Internet Advisor and, through the third wire of the power cable, to Ground. If you have a data circuit that requires isolation of Frame Ground, use the forward RS-232 test port and open switch 1 on the lateral switch bank.

Pin 7 of the rearward RS-232 test port is Signal Ground, and it is isolated from Frame Ground by 100 KOhms to minimize ground-loop problems.

In monitor mode, the inputs to all V-Series signal receivers represent only 1/5 of a standard load, minimizing circuit loading effects. In Simulating and BERT testing modes, the transmitters are configured with normal source impedance.

---

**Mark/Space Indicator**

You can use the Mark/Space Indicator to test the state of any circuit on an RS-232/V.24 interface. The Mark/Space Indicator has two test jacks, which are connected together electrically. To do this, simply jumper from any test jack on either of the lateral or vertical switch banks to either of the Mark/Space Indicator jacks and observe the results. If the incoming signal is more positive than +3.0 volts, the Space LED lights. If the incoming signal is more negative than -3.0 volts, the Mark LED lights. If the Mark and the Space LEDs both light up, the incoming signal is actively changing states. This is normal for data and clock signals, but indicates a problem for control signals.

---

**NOTE**

EIA-232D (Formerly RS-232C) specifications consider interface signals in the range of -3.0 to +3.0 volts to be indeterminate (or not valid) Consistent with this recommendation, the Mark/Space Indicator treats signals in this range as "not present" and gives no indication.

---

## **Source Voltage**

You can hard-wire any signal or control line as On or Off by jumpering it to the Source jacks. The rearward three jacks are connected together electrically and supply -12 volts through a 1 KOhm resistor. The forward three jacks are connected together electrically and supply +12 volts through a 1 KOhm resistor. If you connect a signal or control line to the -12 volts supply it creates a Mark or Off state and if you connect it to the +12 volts supply it creates a Space or On state.

---

## **Active Interface LEDs**

The following is a list of the five LEDs that indicate which interface is currently configured:

- RS-232/V.24
- V.35
- RS-449
- Interface Module
- External Interface

---

## **CAUTION**

Do not connect more than one Internet Advisor port at a time. The V.35, RS-449, RS-232, and External ports are not independent of one another. Connecting more than one port at a time can cause unreliable results.

---

---

## Lead Status LEDs

On the right side, rearward of the keyboard, are ten pairs of LEDs that show a real-time indication of lead status for all of the interfaces. These LEDs also indicate data, clock and control information for the V-Series interfaces. The following list provides information on the meaning of the lighted LEDs:

Left column, Red	Mark State for Data, Off State for Control Signals.
Right column, Green	Space State for Data, On State for Control Signals.
Both LEDs lighted	Active signal toggling.
Neither LED lighted	No signal present.

When the selected interface is RS-232/V.24, the left column LEDs light when the signal level is more negative than -3.6 volts and the right column LEDs light when the signal level is more positive than +3.6 volts. This is a safety margin of 20% above EIA-232D minimum signal requirements of -3.0 and -3.6 volts. If the circuit under test is lighting the proper Internet Advisor LEDs, then there is enough signal present to allow any EIA-232D/RS-232 conforming device to receive the data and control signals. If the circuit under test cannot light these LEDs, the signal levels are too low for reliable reception.

For the Interface Modules, the left column shows the state of the Equipment (or user) signal and the right column shows the state of the Line (or central office) signal. Alarm and Error indications cause their respective red LEDs to light. The green Signal LEDs light if a signal is present. If there is no signal present, the topmost red LED lights to indicate a loss of signal.

These LEDs can provide a visual indication as to whether a V-Series device is physically DTE or DCE. First connect the Internet Advisor to the device under test and configure it for the Monitor mode. If either the DTE/SD Mark or Space LED lights, the device under test is DTE. If the DCE/RD Mark or Space LED lights, the device under test is DCE. If the Internet Advisor is to Simulate a device under test, it must complement the device's physical characteristic. If the device is DTE, the Internet Advisor must be DCE and vice versa.

## V-Series Interfaces

The V-Series Interfaces are the RS-232, RS-449, and V.35 interfaces. The following signals are analyzed on the V-Series Interfaces:

**Table E-1: V-Series Functions**


Function	RS-232	V.35	RS-449
Send Data	DTE	SD	SD
Receive Data	DCE	RD	RD
DTE/Send Timing (DCE)	TC	SCT	ST
DCE/Receive Timing (DCE)	RC	SCR	RT
DTE/Send Timing (DTE)	ETC	SCE	TT
Request to Send	RTS	RS	RS
Clear to Send	CTS	CS	CS
Data Terminal Ready	DTR	DTR	TR
Data Set/Mode Ready	DSR	DSR	DM
Carrier Detect/Rec. Ready	CD	CD	RR

**Table E-2: V-Series Functions for High Speed External Pods Only**

Function	RS-232	V.35	RS-449
Local Loopback (Drv)		LLB	LLB
Remote Loopback (Drv)		RLB	RLB
Test Mode (Mon)		TM	TM



## RS-232C/V.24




**Figure E-2: RS-232C Interface Connector Pins Assignment**

**Table E-3: RS-232C Interface Connector Pins Assignment**

PIN	CCITT CIRCUIT	CIRCUIT FUNCTION	PIN	CCITT CIRCUIT	CIRCUIT FUNCTION
1	101	Protective Ground	14	118	Secondary Transmitted Data
2	103	Transmitted Data	15	114	Transmission Signal Element Timing (DCE Source)
3	104	Received Data	16	119	Secondary Received Data
4	105	Request to Send	17	115	Receiver Signal Element Timing (DCE Source)
5	106	Clear to Send	18		Unassigned
6	107	Data Set Ready	19	120	Secondary Request to Send
7	102	Signal Ground (common return)	20	108.2	Data Terminal Ready
8	109	Received Line Signal Detector	21	110	Signal Quality Detector
9		(Reserved for Data Set Testing)	22	125	Ring Indicator
10		(Reserved for Data Set Testing)	23	111/112	Data Signal Rate Selector (DTE Source)
11		Unassigned	24	113	Transmit Signal Element Timing (DTE Source)
12	122	Secondary Received Line Signal Detector	25		Unassigned
13	121	Secondary Clear to Send			

**RS-449**




**Figure E-3: RS-449 Interface Connector Pins Assignment**

**Table E-4: RS-449 Interface Connector Pins Assignment**

PIN	CIRCUIT NAME	PIN	CIRCUIT NAME
1	Shield	20	Receive Common
2	Send Timing	21	Spare
3	Spare	22	Send Data
4	Send Data	23	Send Timing
5	Send Timing	24	Receive Data
6	Receive Data	25	Request to Send
7	Request to Send	26	Receive Timing
8	Receive Timing	27	Clear to Send
9	Clear to Send	28	Terminal in Service
10	Local Loopback	29	Data Mode
11	Data Mode	30	Terminal Ready
12	Terminal Ready	31	Receiver Ready
13	Receiver Ready	32	Select Standby
14	Remote Loopback	33	Signal Quality
15	Incoming Call	34	New Signal
16	Select Frequency/Signal Rate Selector	35	Terminal Timing
17	Terminal Timing	36	Standby Indicator
18	Test Mode	37	Send Common
19	Signal Ground		

## V.35

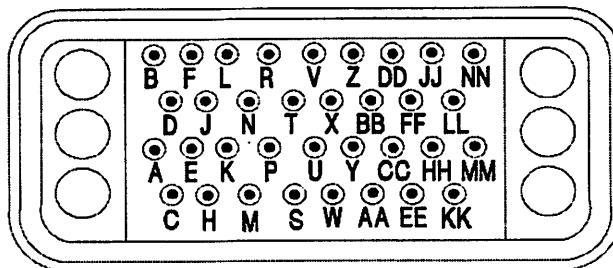

**Figure E-4: V.35 Interface Connector Pins Assignment**

**Table E-5: V.35 Interface Connector Pins Assignment**

PIN	CIRCUIT NAME
A	Chassis Ground
B	Signal Ground
C	Request to Send
D	Clear to Send
E	Data Set Ready
F	Receive Line Signal Detect
P	Transmit Data (A)
R	Received Data (A)
S	Transmit Data (B)
T	Received Data (B)
U	Terminal Timing (A)
V	Receive Timing (A)
W	Terminal Timing (B)
X	Receive Timing (A)
Y	Transmit Timing (A)
AA	Transmit Timing (B)

## Interface Pin-Out Comparison


**Table E-6: Interface Pin-Out Comparison**

RS-232C/CCITT V.24	CCITT V.35	RS-449
25 Pin	34 Pin	37 Pin
1–Protective Ground	A–Protective Ground	1–Shield 37–Send Common
2–Transmitted Data	P–Transmit Data (A) S–Transmit Data (B)	4–Send Data (A) 22–Send Data (B)
3–Received Data	R–Received Data (A) T–Received Data (B)	6–Received Data(A) 24–Received Data (B)
4–Request to Send	C–Request to Send	7–Request to Send (A) 25–Request to Send (B)
5–Clear to Send	D–Clear to Send	9–Clear to Send (A) 27–Clear to Send (B)
6–Data Set Ready	E–Data Set Ready	11–Data Mode (A) 29–Data Mode (B)
7–Signal Ground	B–Signal Ground	19–Signal Ground
8–Carrier Detect	F–Receive Line Signal Detect	13–Receiver Ready (A) 31–Receiver Ready (B)
9–Reserved for Testing	m–Reserved for DSU Testing	
		20–Receive Common
10–Reserved for Testing		10–Local Loop (A) 14–Remote Loop (B)
11–Unassigned		3–SPARE 21–SPARE
12–Sec. Carrier Detect		32–Select Standby
13–Sec. Clear to Send		
14–Sec. Transmitted Data		
15–Transmit Clock (DCE Source)	Y–TX Signal Element Timing o–TX Signal Element Timing	5–Send Timing (A) DCE Source 23–Send Timing (B) DCE Source

**Breakout Box, LEDs & Connectors**  
**V-Series Interfaces**

<b>RS-232C/CCITT V.24</b>	<b>CCITT V.35</b>	<b>RS-449</b>
<b>25 Pin</b>	<b>34 Pin</b>	<b>37 Pin</b>
16–Sec. Received Data		
17–Receive Clock	V–RX Signal Element X–RX Signal Element	8–Receive Timing (A) 26–Receive Timing (B)
18–Unassigned		18–Test Mode (A) 28–Term in Service (A) 34–New Signal
19–Sec. Request to Send		
20–Data Terminal Ready		12–Terminal Ready (A) 30–Terminal Ready (B)
21–Signal Quality Detector		33–Signal Quality (A)
22–Ring Indicator		15–Incoming Call (A)
23–Data Signal Rate Selector		2–Signaling Rate Indicator (A)
		16–Signaling Rate Selector (A)
24–Transmit Clock (DTE Source)		17–Terminal Timing (A) 35–Terminal Timing (B)
25–Busy		36–Stand by Indicator

## AUI - 100Base-T

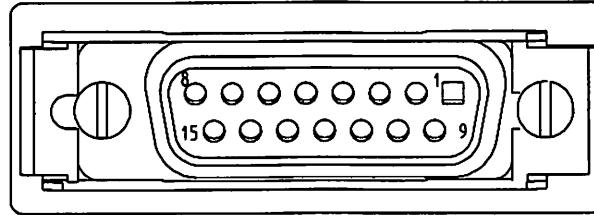


**Figure E-5: AUI - 100Base-T Connector**

**Table E-7: AUI -100Base-T Pins Assignment**

PIN	CIRCUIT NAME	USE
3	DO-A	Data Out circuit A
10	DO-B	Data Out circuit B
11	DO-S	Data Out circuit Shield
5	DI-A	Data In circuit A
12	DI-B	Data in circuit B
4	DI-S	Data In circuit Shield
7	CO-A	Control Out circuit A
15	CO-B	Control Out circuit B
8	CO-S	Control Out circuit Shield
2	CI-A	Control in circuit A
9	CI-B	Control in circuit B
1	CI-S	Control In circuit Shield
6	VC	Voltage Common
13	VP	Voltage Plus
14	VS	Voltage Shield
SHELL	PG	Protection Ground (Conductive Shell)

## MII - 100Base-T




**Figure 8-8: MII - 100Base-T Connector Pin Assignment**

**Table E-8: MII - 100Base-T Connector Pin Assignment**

PIN	CIRCUIT NAME	PIN	CIRCUIT NAME
1	+5 V	21	+5 V
2	MDIO	22	COMMON
3	MDC	23	COMMON
4	RXD<3>	24	COMMON
5	RXD<2>	25	COMMON
6	RXD<1>	26	COMMON
7	RXD<0>	27	COMMON
8	RX_DV	28	COMMON
9	RX_CLK	29	COMMON
10	RX_ER	30	COMMON
11	TX_ER	31	COMMON
12	TX_CLK	32	COMMON
13	TX_EN	33	COMMON
14	TXD<0>	34	COMMON
15	TXD<1>	35	COMMON
16	TXD<2>	36	COMMON
17	TXD<3>	37	COMMON
18	COL	38	COMMON
19	CRS	39	COMMON
20	+5 V	40	+5 V

---

# MDI - 100Base-TX

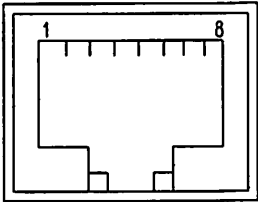


**Figure E-6: MDI - 100Base-TX Connector**

**Table E-9: MDI - 100Base-TX Pin Assignment**

PIN	CIRCUIT NAME
1	TX_D1+
2	TX_D1-
3	RX_D2+
4	BI_D3+
5	BI_D3-
6	RX_D2-
7	BI_D4+
8	BI_D4-



Breakout Box, LEDs & Connectors  
MDI - 100Base-TX

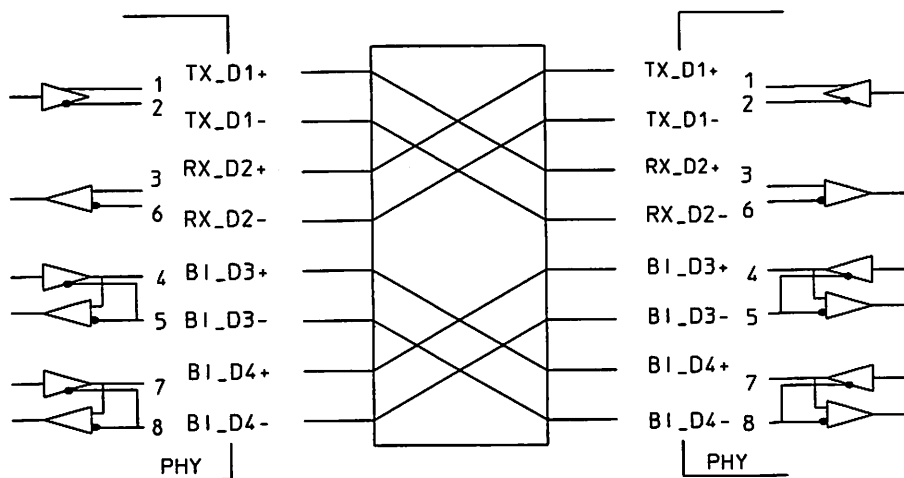

**Figure E-7: MDI - 100Base-TX Crossover function**

---

F

---

**Declarations of Conformity**

## What's in this Appendix

J2294C CEPT-E1 DB9 & RJ45 .....	F-3
J2300C Internet Advisor WAN .....	F-4
J2306B/J2309B Ether/Ether/TR Interface for Internet Advisor .....	F-5
J2307A LAN Token Ring Undercradle .....	F-6
J2524A FDDI Interface for LAN Internet Advisor .....	F-7
J2527A TIMS Undercradle for Internet Advisor .....	F-8
J2900A High Speed Acquisition System .....	F-9
J2904A ISDN BRI Module .....	F-10
J2904B, J2293, 94, 96, 97, 98, 99B ISDN Modules .....	F-11
J2905B ISDN BRI U Interface Module .....	F-12
J2908A DDS 4-Wire Interface Module .....	F-13
J2909A ATM Advisor Series .....	F-14
J2912A Internet Advisor ATM Series .....	F-15
J2913A Internet Advisor ATM 155-UTP Module .....	F-16
J3444A Fast Ethernet LAN Analyzer .....	F-17
J3445A 100 Base-FX Interface Module .....	F-18
J3446C and J3447A Internet Advisor WAN .....	F-19
J3754C Internet Advisor - pcAdvisor .....	F-20

## J2294C CEPT-E1 DB9 & RJ45

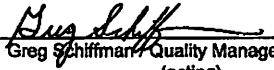
<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Network Systems Test Division 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Internet Advisor - CEPT-E1 DB9 & RJ45 120 Ohm Balanced Module
<b>Model Number(s):</b>	J2294C
<b>Product Option(s):</b>	1A3, 8ZE
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines EN 61000-3-2:1995 / IEC 1000-3-2:1995 + A1 EN 61000-3-3:1995 / IEC 1000-3-3:1994
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO	4 December 1997
	 Greg Schiffman / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-1: J2294C CEPT-E1 DB9 & RJ45

Declarations of Conformity  
J2300C Internet Advisor WAN

J2300C Internet Advisor WAN


<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Network Systems Test Division 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Internet Advisor WAN
<b>Model Number(s):</b>	J2300C
<b>Product Option(s):</b>	001, 002, 005, 1A3, 220, 221
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines EN 61000-3-2:1995 / IEC 1000-3-2:1995 + A1 EN 61000-3-3:1995 / IEC 1000-3-3:1994
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 December 1997	 Jiri Lesford, Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-2: J2300C Internet Advisor WAN

## J2306B/J2309B Ether/Ether/TR Interface for Internet Advisor

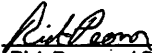
<b>DECLARATION OF CONFORMITY</b>	
according to ISO/IEC Guide 22 and EN 45014	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Ethernet and Ethernet/Token Ring Undercradles for WAN Internet Advisors
<b>Model Number(s):</b>	J2306B, J2309B
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 November 1996	 Rick Pearson / Quality Manager (acting)
European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZG / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)	

Figure F-3: J2306B/J2309B Ether/Ether/TR Interface for Internet Advisor

Declarations of Conformity  
J2307A LAN Token Ring Undercradle

## J2307A LAN Token Ring Undercradle


<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Network Systems Test Division 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Internet Advisor LAN - Token Ring undercradle
<b>Model Number(s):</b>	J2307A
<b>Product Option(s):</b>	1A3, 8ZE
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1981 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines EN 61000-3-2:1995 / IEC 1000-3-2:1995 + A1 EN 61000-3-3:1995 / IEC 1000-3-3:1994
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 22 December 1997	 Greg Schiffman / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Hennenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-4: J2307A LAN Token Ring Undercradle

## J2524A FDDI Interface for LAN Internet Advisor


DECLARATION OF CONFORMITY	
according to ISO/IEC Guide 22 and EN 45014	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	FDDI Interface undercradle for WAN and LAN Internet Advisors
<b>Model Number(s):</b>	J2524A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 November 1998	 Rick Pearson / Quality Manager (acting)
European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)	

Figure F-5: J2524A FDDI Interface for LAN Internet Advisor



Declarations of Conformity  
J2527A TIMS Undercradle for Internet Advisor

J2527A TIMS Undercradle for Internet Advisor


<b>DECLARATION OF CONFORMITY</b>	
according to ISO/IEC Guide 22 and EN 45014	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	TIMS undercradle for WAN and LAN Internet Advisors
<b>Model Number(s):</b>	J2527A
<b>Product Option(s):</b>	Opt. 001
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 November 1996	 Rick Pearson / Quality Manager (acting)
European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)	

Figure F-6: J2527A TIMS Undercradle for Internet Advisor

## J2900A High Speed Acquisition System

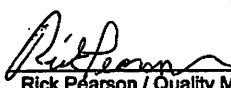
<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	High Speed Acquisition System Undercradle for Internet Advisor
<b>Model Number(s):</b>	J2900A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/338/EEC and carries the CE marking accordingly.	
*The product was tested in typical configurations.	
Colorado Springs, CO 28 October 1996	 Rick Pearson / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boesingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-7: J2900A High Speed Acquisition System

Declarations of Conformity  
J2904A ISDN BRI Module

## J2904A ISDN BRI Module

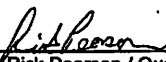
<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	ISDN Basic Rate Interface module for Internet Advisor series
<b>Model Number(s):</b>	J2904A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 November 1996	 Rick Pearson / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-8: J2904A ISDN BRI Module

## J2904B, J2293, 94, 96, 97, 98, 99B ISDN Modules


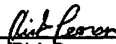
<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	ISDN analyzer modules for Internet Advisor
<b>Model Number(s):</b>	J2904B, J2293B, J2294B, J2296B, J2297B, J2298B, J2299B
<b>Product Option(s):</b>	All
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 16 September 1996	 Rick Pearson / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boesingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-9: J2904B, J2293, 94, 96, 97, 98, 99B ISDN Modules

Declarations of Conformity  
J2905B ISDN BRI U Interface Module

## J2905B ISDN BRI U Interface Module

<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Communications Meas Division - Colorado 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Dual U-Interface (2B1Q) Module for Internet Advisor ISDN analyzer
<b>Model Number(s):</b>	J2905B
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1981 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 20 December 1996	 Rick Pearson / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

**Figure F-10: J2905B ISDN BRI U Interface Module**

## J2908A DDS 4-Wire Interface Module

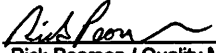
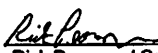
<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	DDS 4-Wire Interface module for Internet Advisor series
<b>Model Number(s):</b>	J2908A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 November 1996	 Rick Pearson / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-11: J2908A DDS 4-Wire Interface Module

Declarations of Conformity  
J2909A ATM Advisor Series

## J2909A ATM Advisor Series

<b>DECLARATION OF CONFORMITY</b>	
<small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	DS-3/E3 Interface module for Internet Advisor ATM series
<b>Model Number(s):</b>	J2909A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 November 1996	 Rick Pearson / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

**Figure F-12: J2909A ATM Advisor Series**

## J2912A Internet Advisor ATM Series


<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	OC-3c/STM-1 analyzer module for Internet Advisor ATM
<b>Model Number(s):</b>	J2912A
<b>Product Option(s):</b>	All
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 18 September 1996	 Rick Pearson / Quality Manager (acting)
<small><sup>1</sup> European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZG / Standards Europe, Hermannsberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-13: J2912A ATM Advisor Series



Declarations of Conformity  
J2913A Internet Advisor ATM 155-UTP Module

J2913A Internet Advisor ATM 155-UTP Module

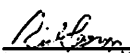

<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Communications Meas Division - Colorado 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Internet Advisor ATM 155-UTP Module
<b>Model Number(s):</b>	J2913A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992
	IEC 801-2:1991 4 kV CD, 8 kV AD
	IEC 801-3:1984 3 V/m
	IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 8 September 1997	 Greg Schiffman / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-14: J2913A ATM 155-UTP Module

## J3444A Fast Ethernet LAN Analyzer

<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Fast Ethernet LAN analyzer for Internet Advisor
<b>Model Number(s):</b>	J3444A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 15 August 1998	 Andy Ouderkerk / Quality Manager
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

**Figure F-15: J3444A Fast Ethernet LAN Analyzer  
for HP Internet Advisor**

Declarations of Conformity  
J3445A 100 Base-FX Interface Module

J3445A 100 Base-FX Interface Module

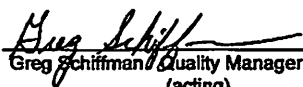
<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Colorado Communications Operation 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	100Base-FX Interface Module for Internet Advisor LAN analyzer
<b>Model Number(s):</b>	J3445A
<b>Product Option(s):</b>	None
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/338/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 16 October 1998	 Greg Schiffman, Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-16: J3445A 100 Base-FX Interface Module for HP Internet Advisor

## J3446C and J3447A Internet Advisor WAN


<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Network Systems Test Division 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Internet Advisor LAN - Fast Ethernet
<b>Model Number(s):</b>	J3446C, J3447A
<b>Product Option(s):</b>	001, 005 (these affect J3446C only)
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines EN 61000-3-2:1995 / IEC 1000-3-2:1995 + A1 EN 61000-3-3:1995 / IEC 1000-3-3:1994
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 12 December 1997	 Jim Ledford / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Herrenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-17: J3446C and J3447A Internet Advisor WAN

Declarations of Conformity  
J3754C Internet Advisor - pcAdvisor

J3754C Internet Advisor - pcAdvisor


<b>DECLARATION OF CONFORMITY</b> <small>according to ISO/IEC Guide 22 and EN 45014</small>	
<b>Manufacturer's Name:</b>	Hewlett-Packard Co.
<b>Manufacturer's Address:</b>	Network Systems Test Division 5070 Centennial Boulevard Colorado Springs, Colorado 80919
declares that the product	
<b>Product Name:</b>	Internet Advisor - pc Advisor
<b>Model Number(s):</b>	J3754C
<b>Product Option(s):</b>	001, 005, 1A3, 506, 516, 8ZE
conforms to the following Product Specifications:	
<b>Safety:</b>	EN 61010-1:1993 / IEC 1010-1:1990 + A1
<b>EMC:</b>	EN 55011:1991 / CISPR 11:1990 (Group 1, Class A) <sup>1</sup> EN 50082-1:1992 IEC 801-2:1991 4 kV CD, 8 kV AD IEC 801-3:1984 3 V/m IEC 801-4:1988 0.5 kV Signal Lines, 1 kV Power Lines EN 61000-3-2:1995 / IEC 1000-3-2:1995 + A1 EN 61000-3-3:1995 / IEC 1000-3-3:1994
<b>Supplementary Information:</b>	
The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.	
<sup>1</sup> The product was tested in a typical configuration.	
Colorado Springs, CO 5 December 1997	 Greg Schiffman / Quality Manager (acting)
<small>European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ / Standards Europe, Hohenberger Strasse 130, D-71034 Boeblingen, Germany (FAX +49-7031-14-3143)</small>	

Figure F-18: J3754C Internet Advisor - pcAdvisor

---

G

---

**Hewlett-Packard Sales Offices**

# Hewlett-Packard Sales Offices

Arranged alphabetically by country

## Headquarters Offices

*If no local office is listed for your area, contact one of these headquarters offices.*

### Asia-Pacific

Hewlett-Packard Asia Pacific Ltd.

17-21/F Shell Tower  
Times Square  
1 Matheson Street  
Causeway Bay

#### Hong Kong

Tel: (852) 599-7777  
Fax: (852) 506-4997

Yokogawa Hewlett-Packard Ltd.

3-29-21 Takaido-higashi  
Suginami-ku  
Tokyo 168  
Japan

Tel: (81/3) 3331-6111  
Fax: (81/3) 3335-1478

### Canada

Hewlett-Packard (Canada) Ltd.  
5150 Spectrum Way  
Mississauga, Ontario L4W 5G1

Tel: (905) 206-4725  
Fax: (905) 206-4739

### Eastern Central Europe

Hewlett-Packard GmbH  
Lieblgasse 1  
P.O. Box 72

A-1222 Vienna, Austria  
Tel: (43/1) 25000-0  
Fax: (43/1) 25000-444  
Telex: 134-425

### Europe

Hewlett-Packard S.A.  
Route du Nant-d'Avril 150  
CH-1217 Meyrin 2  
Switzerland

Tel: (41) 22/780-81-11  
Fax: (41) 22/780-85-42  
Telex: 419 019 hps

### Latin America

Hewlett-Packard Co.  
5200 Blue Lagoon Drive, 9th  
Floor

Miami, Florida, USA 33126  
Tel: (305) 267-4245  
Fax: (305) 267-4288

### Middle East and Africa

Hewlett-Packard S.A.  
International Sales Branch  
Middle East/Africa

Rue de Veyrot 39  
P.O. Box 364  
1217 Meyrin 1  
Geneva, Switzerland  
Tel: (41/22) 780-4111  
Fax: (41/22) 780-4770  
Telex: 418907

### Local Area Offices

*Alphabetically by country*

#### Albania

IBS (Information & Business  
Systems)  
Hewlett-Packard Distributor  
1, Rr. Kongresi Permetit  
Tirana  
Tel: 5/4223854  
Fax: 5/4223864

#### Algeria

R.T.I.  
Realisation Telematiques  
Internationales  
Lot A, Villa no 57  
Bab - Hassen  
Wilaya de Tipaza  
Algerie  
Tel: (213) 230-6430  
Fax: (213) 230-6431

#### Angola

*See South Africa*

#### Argentina

Hewlett-Packard Argentina S.A.  
Montaneses 2140  
1428 Buenos Aires  
Tel: (54/1) 781-4059/69  
(54/1) 781-4090

#### Australia

Adelaide  
Hewlett-Packard Australia Ltd.  
191 Fullarton Road  
Dulwich, S.A. 5065  
Tel: (61/8) 366-5111  
Fax: (61/8) 332-0020

#### Canberra

Hewlett-Packard Australia Ltd.  
Thynne Street, Fern Hill Park  
Bruce, ACT 2617  
Tel: (61/6) 251-6999  
Fax: (61/6) 251-6948

#### Melbourne

Hewlett-Packard Australia Ltd.  
31-41 Joseph Street  
Blackburn, VIC 3130  
Tel: (61/3) 272-2895  
Fax: (61/3) 898-7831

#### Perth

Measurement Innovation (WA)  
Pty. Ltd.  
55B Duncraig Road  
(P.O. Box 313)  
Applecross, W.A. 6153  
Tel: (61/9) 316-2757  
Fax: (61/9) 316-1392  
Mobile: 61-18-33-6434

#### Sydney

Hewlett-Packard Australia Ltd.  
17-23 Talavera Road  
North Ryde, N.S.W. 2113  
Tel: (61/2) 950-7444  
Fax: (61/2) 888-9072

#### Austria

Hewlett-Packard GmbH  
Lieblgasse 1  
A-1222 Vienna  
Tel: (43/1) 25000-0  
Fax: (43/1) 25000-444

#### Bahrain

BAMTEC  
P.O. Box 10373  
Mezzanine Floor, Al-Hasan  
Bldg.  
Diplomatic Area  
Manama  
Tel: (973) 53-66-43  
Fax: (973) 53-66-67  
Telex: 8550 WAEL BN

#### Belgium

Hewlett-Packard Belgium  
S.A./N.V.  
Boulevard de la Woluwe  
100/102 Woluwedal  
B 1200 Brussels  
Tel: (32/2) 778-34-17  
Fax: (32/2) 778-34-14

#### Bolivia

Siser, Ltda  
Rosendo Gutierrez 727  
Casilla 4084  
La Paz  
Tel: (591-2) 34-2485  
Fax: (591-2) 35-9268

#### Brazil

Edisa Hewlett-Packard S.A.  
Alameda Rio Negro, 750  
06454-000 - Alphaville-Barueri-  
São Paulo

Tel: (011) 726-8155  
(011) 726-8160  
Fax: (011) 726-8171

Edisa Hewlett-Packard S.A.  
Rua Lauro Mueller, 116  
Grupo 803 - Edificio Torre  
Rio Sul  
22290-160 - Botafogo-  
Rio de Janeiro  
Tel: (021) 541-4404  
Fax: (021) 295-2195

#### Brunei

Komputer Wisman Sdn Bhd  
Room 1, 3rd Floor  
Jalan Tutong  
BS Begawan  
Brunei Darussalam  
Tel: (673/2) 23918  
Telex: 0809-2447

#### Bulgaria

S&T Bulgaria Ltd.  
Hewlett-Packard Distributor  
114 Vasil Levski Blvd.  
1504 Sofia  
Tel: (2) 468429  
Fax: (2) 468391

#### Canada

Canadian Headquarters  
Office  
Hewlett-Packard (Canada) Ltd.  
5150 Spectrum Way  
Mississauga, Ontario L4W 5G1  
Tel: (905) 206-4725  
Fax: (905) 206-4739

#### Alberta

Hewlett-Packard (Canada) Ltd.  
150 6th Avenue S. W.  
Petro Canada Tower, Ste. 3600  
Calgary, Alberta T2P 3Y7  
Tel: (403) 262-0777  
Fax: (403) 237-9309

Hewlett-Packard (Canada) Ltd.  
11120 178th Street  
Edmonton, Alberta T5S 1P2  
Tel: (403) 486-6666  
Fax: (403) 489-8764

## Sales Offices

### British Columbia

Hewlett-Packard (Canada) Ltd.  
13575 Commerce Pkwy, Ste.  
110

Richmond, British Columbia  
V6V 2L1

Tel: (604) 270-2277

Fax: (604) 270-0859

### Manitoba

Hewlett-Packard (Canada) Ltd.  
200 Graham Avenue, Ste. 1000

Winnipeg, Manitoba R3C 4L5

Tel: (204) 942-4725

Fax: (204) 989-3553

### New Brunswick

### Newfoundland

### Nova Scotia

Hewlett-Packard (Canada) Ltd.  
238 Brownlow Avenue, Ste. 103

Park Place Centre

Dartmouth, Nova Scotia

B3B 1Y2

Tel: (902) 468-4725

Fax: (902) 468-4311

### Ontario

### London See Mississauga

Hewlett-Packard (Canada) Ltd.  
5150 Spectrum Way

Mississauga, Ontario L4W

5G1

Tel: (905) 206-4725

Fax: (905) 206-4739

Hewlett-Packard (Canada) Ltd.

2670 Queensview Drive

Ottawa, Ontario K2B 8K1

Tel: (613) 820-6483

Fax: (613) 820-0377

### Prince Edward Island

See Dartmouth, Nova Scotia

### Quebec

Hewlett-Packard (Canada) Ltd.  
17500 Trans Canada Highway

South Service Road

Kirkland, Quebec H9J 2X8

Tel: (514) 697-4232

Fax: (514) 697-6941

### Saskatchewan

See Winnipeg, Manitoba

### Chile

ASC. S.A.

Austria 2041

Santiago

Tel: (56-2) 274-7676

Fax: (56-2) 223-1912

### China, People's Republic of

China Hewlett-Packard Co., Ltd.  
5-6/F West Wing Office

China World Trade Center

No. 1 Jian Guo Men Wei Avenue

Beijing 100004

Tel: (86/1) 505-3888

Fax: (86/1) 505-0394

Telex: 085-22601 CTSHP CN

Cable: 1920 Beijing

China Hewlett-Packard Co., Ltd.

7/F, the Electronic Foreign

Trade Building #88

East 2nd Section, Yi-Huan-Lu

Road

Chengdu 610051, PRC

Tel: (86/28) 443-2666

Fax: (86/28) 443-2618

China Hewlett-Packard Co., Ltd.

Room 1201-1204, Gift Plaza

Main

Bldg. 339 Huangshi dong

Roadroad

Guangzhou 510060

Tel: (86/20) 331-1421

Telex: 44556 GPHGZ CN

China Hewlett-Packard Co., Ltd.

Room 638, Office Building

Shanghai Center

1376 Nan Jing Road West

Shanghai 200040

Tel: (86/21) 279-8668

Fax: (86/21) 279-8943

Telex: 086-33577 CHPSB CN

China Hewlett-Packard Co., Ltd.

4/F Huaiqiang Component

Building

Zhenhua Road, Shangbu

District

Shenzhen City 518031

Tel: (86/755) 368-608

Fax: (86/755) 363-154

### Columbia

Instrumentacio, S.A.

Calle 115 No. 11A-10

Bogota

Tel: (571) 612-1313

Fax: (571) 612-0805

### Commonwealth of Independent States

Hewlett-Packard Company

Pokrovski Blvd. 4/17 Kv. 12

101000 Moscow, Russia

Tel: (7/505) 213-740

Fax: (7/095) 230-2611

### Costa Rica

I.S. de Costa Rica

Calle 25, Avenida 6 & 8, No. 648

San Jose

Tel: (506) 233-3722

Fax: (506) 255-3528

### Czech Republic

Hewlett-Packard

Ceskoslovensko spo

Novodvorska 82

14200 Praha 4

Tel: 2/4717321

Fax: 2/47176111

### Cyprus

Telerexa Ltd.

P.O. Box 1152

Valentine House

8 Stassandrou St.

Nicosia

Tel: (3572) 44.56.28

Fax: (3572) 44.55.84

Telex: 5845 tlrx cy

### Denmark

Hewlett-Packard A/S

Kongevejen 25

DK-3460 Birkerød

Tel: (45) 45 99 10 00

Fax: (45) 45 82 06 30

Hewlett-Packard A/S

Brenstrupgaardsvej 13

DK-8200 Aarhus N

Tel: (45) 86 78 30 00

Fax: (45) 86 78 30 33

Telex: 37409 hpas dk

### Dominican Republic

Esacomp, S.A.

Calle Seminario No. 55

Ens. Piantini

Santo Domingo

Tel: (809) 563-6350

Fax: (809) 565-0332

### Ecuador

CYEDE Cia. Ltda.

Avenida Eloy Alfaro 1749

Quito

Tel: (593-2) 44-4224

Fax: (593-2) 44-4223

Telex: 39322548 CYEDE ED

### Egypt

ORASCOM

Onsi Sawiris & Co.

P.O. Box 1191

160, 26th July Street

Aguza/Cairo

Tel: (202) 302-69-30

Fax: (202) 344-02-01

Telex: 92768 orscm un

### El Salvador

IPESA de El Salvador

29 Avenida Norte 1223

San Salvador

Tel: (503) 26-6858

Fax: (503) 52-7772

Telex: 301 20539 IPESA SAL

### Finland

Hewlett-Packard Oy

Piispankalliontie 17

02200 Espoo (Helsinki)

Tel: (358/0) 887-21

Fax: (358/0) 887-22-77

Hewlett-Packard Oy

Teknoligiantie 6

90570 Oulu

Tel: (358/81) 5515144

Fax: (358/81) 5515145

### France

Hewlett-Packard France

Test et Mesure

Z.A. de Courtaboeuf

1 Avenue du Canada

91947 Les Ulis

Tel: (33/1) 69 82.62.20

Fax: (33/1) 69 82.65.35

### Germany

#### Headquarters

Hewlett-Packard GmbH

Herrenberger Strasse 130

7030 Böblingen

Tel: (49) 7031/14-0

Fax: (49) 7031/14-2999

Hewlett-Packard GmbH

Hewlett-Packard-Strasse

61352 Bad Homburg

Tel: (49) 6172/16-0

Fax: (49) 6172/16-1309

Hewlett-Packard GmbH

Lützowplatz 15

10785 Berlin

Tel: (49) 30/25452-0

Fax: (49) 30/25452-162

Hewlett-Packard GmbH

Schickardstrasse 2

71034 Böblingen

Tel: (49) 7031/14-0

Fax: (49) 7031/14-6429

Hewlett-Packard GmbH

Friedrich-Ebert-Allee 26

53113 Bonn

Tel: (49) 228/23400-1

Fax: (49) 228/235-315

Hewlett-Packard GmbH

Überseering 16

22297 Hamburg

Tel: (49) 40/63808-0

Fax: (49) 40/63808-327

Hewlett-Packard GmbH

Baumschulenallee 20-22

30625 Hannover

Tel: (49) 511/9577-0

Fax: (49) 511/9577-126

Karlsruhe See Waldbronn

Hewlett-Packard GmbH

Nikolaistrasse 13-23

04109 Leipzig

Tel: (49) 341/21635-0

Fax: (49) 341/21635-220

München See Taufkirchen



**Hewlett-Packard GmbH**  
Emmericher Strasse 13  
90411 Nürnberg 10  
Tel: (49) 911/9524-0  
Fax: (49) 911/9524-140

**Hewlett-Packard GmbH**  
Berliner Strasse 111  
40880 Ratingen  
Tel: (49) 2102/90.50  
Fax: (49) 2102/90.5300

**Hewlett-Packard GmbH**  
Eschenstrasse 5  
82024 Taufkirchen  
Tel: (49) 89/61412-0  
Fax: (49) 89/61412-300

**Hewlett-Packard GmbH**  
Hewlett-Packard Str. 8  
76337 Waldbrunn (Karlsruhe)  
Tel: (49) 7243/602-0  
Fax: (49) 7243/602-512

## Great Britain

*See United Kingdom*

## Greece

G-Systems  
Hewlett-Packard Distributor  
76, Ymittou Street  
11634 Athens  
Tel: (30/1) 7264045

## Guatemala

IPESA de Guatemala  
Avenida Reforma 3-48, Zona 9  
Guatemala City  
Tel: (502-2) 31-4786  
Fax: (502-2) 31-6627  
Telex: 3055765 IPESA GU

## Hong Kong

**Hewlett-Packard (HK) Ltd.**  
17-21/F Shell Tower  
Times Square  
1 Matheson Street  
Causeway Bay

**Hong Kong**  
Tel: (852) 599-7777  
Fax: (852) 506-9261

## Hungary

**Hewlett-Packard Magyarorszag Kft.**  
Erzebet kiralyne utja 1/c  
1146 Budapest  
Tel: (36) 1 2524505  
Fax: (36) 1 2527441

## India

**Hewlett-Packard India Pvt. Ltd.**  
29 Cunningham Road  
Bangalore 560 052  
Tel: (91/80) 226-9026  
Fax: (91/80) 221-0096  
Telex: 845-2773/2821 HP IN

**Hewlett-Packard India Pvt. Ltd.**  
Unit-3, B-Wing  
Ground Floor, Neelam Center  
Hind Cycle Road  
Worli, Bombay 400 018  
Tel: (91/22) 493-7817  
Fax: (91/22) 493-7823  
Telex: 11-76812 HPIB IN

**Hewlett-Packard India Pvt. Ltd.**  
DBS Executive Centre  
8 Acharya J.D. Bose Road  
Calcutta 700017  
Tel: (91/332) 470-666  
Fax: (91/332) 247-4614  
Telex: 21-5417/4163

**Hewlett-Packard India Pvt. Ltd.**  
5-9-13 Taramandal Complex  
9th Floor, Saifabad  
Hyderabad 500 004  
Tel: (91/40) 232-413  
Fax: (91/40) 231-756  
Telex: 425-2422 HPIL IN

**Hewlett-Packard India Pvt. Ltd.**  
Paharpur Business Centre  
21 Nehru Place  
New Delhi 110 019  
Tel: (91/11) 647-2311  
Fax: (91/11) 646-1117  
Telex: 31-71127 PBC IN

## Indonesia

P.T. BERCA Hardayaperkasa  
Jl. Taman Tanah Abang III No. 31  
Jakarta 10160 Pusat  
Tel: (62/21) 385-5381  
Fax: (62/21) 380-9166

## Ireland

**Hewlett-Packard Ireland Ltd.**  
Hewlett-Packard House  
Stradbrook Road  
Blackrock, Co. Dublin  
Tel: (353/1) 284-4633  
Fax: (353/1) 284-5134  
Telex: 30430

## Iran

Evertch  
11 bis, rue Toepffer  
1206 Geneve  
Tel: 4122/346 92 92  
Fax: 4122/346 86 91  
Telex: 421 787

## Israel

**Computation and Measurement Systems (CMS) Ltd.**  
11, Hashlosha Street  
Tel-Aviv 67060  
Tel: (9723) 538-03-80  
Fax: (9723) 537-50-55  
Telex: 371234 HPCMS

## Italy

**Hewlett-Packard Italiana S.p.A.**  
Via G. di Vittorio 9  
20063 Cernusco s/N (MI)  
Tel: (39/2) 92-121  
Fax: (39/2) 92-104-069

**Hewlett-Packard Italiana S.p.A.**  
Via Nuova Rivoltana, 95  
20090 Limite (MI)  
Tel: (39/2) 92-12-1  
Fax: (39/2) 70-300-456

**Hewlett-Packard Italiana S.p.A.**  
Via Emanuele Gianturco 92 G  
80146 Napoli (Na)  
Tel: (39/81) 73-40-100  
Fax: (39/81) 73-40-216

**Hewlett-Packard Italiana S.p.A.**  
Via Praglia 15  
10044 Pianezza (To)

**Hewlett-Packard Italiana S.p.A.**  
Viale del Tintoretto, 200  
00142 Roma Eur  
Tel: (39/6) 54-831  
Fax: (39/6) 54-01-661  
Torino *See Pianezza (To)*

## Japan

**Akita**  
Yokogawa-Hewlett-Packard Ltd.  
Nihonseimei Akita Chuodori Bldg.  
4-2-7 Nakadori  
Akita 010  
Tel: (81/188) 36-5021  
Fax: (81/188) 36-5099

## Atsugi

**Yokogawa-Hewlett-Packard Ltd.**  
9-32 Tamuracho  
Kanagawa 243  
Tel: (81/462) 25-0031  
Fax: (81/462) 25-0064

## Chiba

**Yokogawa-Hewlett-Packard Ltd.**  
WBG Malibu East Bldg. 19F  
2-6 Nakase  
Mihama-ku, Chiba-shi  
Chiba 261-71  
Tel: (81/43) 297-0581  
Fax: (81/43) 297-0558

## Fukuoka

**Yokogawa-Hewlett-Packard Ltd.**  
Daisan Hakata-Kaisei Bldg.  
1-3-6 Hakataekiminami  
Hakata-ku  
Fukuoka 812  
Tel: (81/92) 472-8731  
Fax: (81/92) 473-4745

## Hachioji

**Yokogawa-Hewlett-Packard Ltd.**  
9-1 Takakura-cho  
Hachioji-shi  
Tokyo 192  
Tel: (81/426) 42-1261  
Fax: (81/426) 45-2631

## Hamamatsu

**Yokogawa-Hewlett-Packard Ltd.**  
219-21 Motoshiro-machi  
Hamamatsu-shi  
Shizuoka 430  
Tel: (81/53) 456-1771  
Fax: (81/53) 455-2371

## Hiroshima

**Yokogawa-Hewlett-Packard Ltd.**  
Nissei-Heiwakoen Bldg.  
3-25 Nakajima-cho Naka-ku  
Hiroshima 730  
Tel: (81/82) 241-0611  
Fax: (81/82) 241-0619

## Kawasaki

**Yokogawa-Hewlett-Packard Ltd.**  
3-2-2 Sakado  
Takatsu-ku Kawasaki  
Kanagawa 213  
Tel: (81/44) 812-9711  
Fax: (81/44) 812-5235

## Kobe

**Yokogawa-Hewlett-Packard Ltd.**  
1-3-2 Muroya Nishi-ku  
Kobe 651-22  
Tel: (81/78) 993-2600  
Fax: (81/78) 993-2698

## Kumagaya

**Yokogawa-Hewlett-Packard Ltd.**  
Nissei-Kumagaya Bldg.  
2-42 Miya-machi Kumagaya-shi  
Saitama 360  
Tel: (81/485) 24-6563  
Fax: (81/485) 24-9050

## Kyoto

**Yokogawa-Hewlett-Packard Ltd.**  
Maeda NS Bldg.  
518 Akinono-machi Niijo-Kudaru  
Karasuma Nakakyo-ku  
Kyoto 604  
Tel: (81/75) 211-4301  
Fax: (81/75) 211-2833

## Mito

**Yokogawa-Hewlett-Packard Ltd.**  
Mito Mitsui Bldg.  
1-4-73 Sannomaru  
Mito 310  
Tel: (81/292) 25-7470  
Fax: (81/292) 31-6589

## Matsumoto

**Yokogawa-Hewlett-Packard Ltd.**  
38 Bldg.  
1-4-6 Nagisa  
Matsumoto  
Nagano 390  
Tel: (81/263) 28-8010  
Fax: (81/263) 28-8020

## Nagoya

**Yokogawa-Hewlett-Packard Ltd.**  
Nagoya Kokusai Center Bldg.  
1-47-1 Nakono, Nakamura-ku  
Nagoya 450  
Tel: (81/52) 571-5171  
Fax: (81/52) 565-0896

## Sales Offices

### Omiya

Yokogawa-Hewlett-Packard Ltd.  
Mitsui-seimei Omiya Miyamachi  
Bldg.  
2-96-1 Miyamachi Omiya-shi  
Saltama 330  
Tel: (81/48) 645-8031  
Fax: (81/48) 645-8001

### Osaka

Yokogawa-Hewlett-Packard Ltd.  
Chuo Bldg.  
5-4-20 Nishinakajima  
Yodogawa-ku  
Osaka 532  
Tel: (81/6) 304-6026  
Fax: (81/6) 304-0216

### Sapporo

Yokogawa-Hewlett-Packard Ltd.  
Sumitomo-seimei Sapporo  
Chuo Bldg.  
1-1-14 Nanjo-higashi Chuo-ku  
Hokkaido 060  
Tel: (81/11) 251-1561  
Fax: (81/11) 222-3239

### Sendai

Yokogawa-Hewlett-Packard Ltd.  
Yamaguchi Bldg.  
1-1-31 Ichibancho Aoba-ku  
Sendai 980  
Tel: (81/22) 225-1011  
Fax: (81/22) 225-1616

### Takaido

Yokogawa-Hewlett-Packard Ltd.  
3-8-20 Takaido-higashi  
Suginami-ku  
Tokyo 168  
Tel: (81/3) 3335-8111  
Fax: (81/3) 3335-9123

### Toyota

Yokogawa-Hewlett-Packard Ltd.  
Nakane-Nissei Bldg.  
4-25-18 Nishi-machi  
Toyota  
Aichi 471  
Tel: (81/565) 35-7411  
Fax: (81/565) 35-7446

### Tsukuba

Yokogawa-Hewlett-Packard Ltd.  
Tsukuba-Mitsui Bldg.  
1-6-1 Takezono  
Tsukuba 305  
Tel: (81/298) 51-5141  
Fax: (81/298) 51-5381

### Utsunomiya

Yokogawa-Hewlett-Packard Ltd.  
Chiyodaseimei-Utsunomiya  
Bldg.  
2-3-1 Odori  
Utsunomiya 320  
Tel: (81/286) 33-1153  
Fax: (81/286) 33-1175

### Jordan

Scientific & Medical Supplies  
Co.  
P.O. Box 1387  
Amman  
Tel: (962/6) 62-49-07  
Fax: (962/6) 62-82-58  
Telex: 21456 sabco jo

### Korea

Samsung Hewlett-Packard Co.  
Ltd.  
SHP House  
25-12, Yoido-dong  
Youngdeung po-ku  
Seoul 150-010  
Tel: (82/2) 769-0114  
Fax: (82/2) 784-7084

Samsung Hewlett-Packard Co.  
Ltd.  
18/F Young Nam Tower B/D  
111, Shin Cheon-dong, Dong-  
Gu  
Taegu  
Tel: (82/53) 754-2666  
Fax: (82/53) 752-4696  
Samsung Hewlett-Packard Co.  
Ltd.  
3rd F, Hong In Tower Officetel  
536-9, Bong Myung-dong  
Yusung-gu, Taejeon  
Tel: (82/42) 828-6701  
Fax: (82/42) 828-6709

### Kuwait

Al-Khaldiya Electronics &  
Electricals Equipment Co.  
P.O. Box 830  
Safat 13009  
Kuwait  
Tel: 965/24 59 815  
Fax: 965/24 59 852

### Lebanon

Computer Information Systems  
(C.I.S.)  
Lebanon Street, Chammas  
Bldg.  
P.O. Box 11-6274  
Dora-Beirut  
Tel: (961/1) 405-413  
Fax: (961/1) 601.906  
Tel/Fax: (3579) 514-256  
*Cyprus-based line*  
Telex: 42309 chasis le

### Malawi

*See South Africa*

### Malaysia

Hewlett-Packard Sales (M) SDN  
BHD Ground Floor, Wisma  
CycleCarri  
288, Jalan Raja Laut  
50350 Kuala Lumpur  
Tel: (60/3) 298-6555  
Fax: (60/3) 291-5495  
Telex: MA 31011

### Penang

Hewlett-Packard Sales (M)  
SDN BHD  
6/F Wisma Penang Garden  
42 Jalan Sultan Ahmad Shah  
10050 Penang  
Tel: (60/4) 376-532  
Fax: (60/4) 371-027  
Telex: MA 41111

### Mauritius

*See South Africa*

### Mexico

Hewlett-Packard de Mexico,  
S.A. de C.V.  
Prolongación Reforma 700  
Col. Lomas de Sante Fé  
01210 Mexico, D.F.  
Tel: (52-5) 326-4392  
Fax: (52-5) 326-4301

### Morocco

SICOTEL  
Complexe des Habous  
Tour C, avenue des Far  
Casablanca 01  
Tel: (212) 231-22-70  
Fax: (212) 231-65-45  
Telex: 27604

### Mozambique

*See South Africa*

### Nambia

*See South Africa*

### The Netherlands

Hewlett-Packard Nederland B.V.  
Postbox 667  
1180 AR Amstelveen  
Netherlands  
Tel: (31/20) 547-6669  
Fax: (31/20) 647-8706

### New Zealand

Hewlett-Packard (N.Z.) Ltd.  
186-190 Willis Street  
Wellington  
Tel: (64/4) 802-6800  
Fax: (64/4) 384-3380

### Nigeria

Management Information  
Systems Co. Ltd.  
3 Gerrard Road  
P.O. Box 53386  
Ikoyi, Lagos  
Tel: (2341) 269.34.23  
Fax: (2341) 269.34.19  
Telex: 23582 DATEC NG

### Norway

Hewlett-Packard Norge AS  
Drammensveien 169  
P.O. Box 60 Skøyen  
N-0212 Oslo  
Tel: (47) 22-73-56-00  
Fax: (47) 22-73-56-19  
Hewlett-Packard Norge AS  
Boehmergt. 44  
N-5037 Solheimsviken  
Tel: (47) 55-29-00-90  
Fax: (47) 55-29-10-72

### Oman

IMTAC LLC  
P.O. Box 51196  
Mina al Fahal  
Muscat  
Tel: (968) 707-727, (968)  
707-723  
Fax: (968) 796-639, (968)  
797-709

### Pakistan

Mushko Electronics (PVT) Ltd.  
68-W Sama Plaza  
Blue Area, G-7  
Islamabad 44000  
Tel: (92/51) 828-459  
Fax: (92/51) 816-190  
Telex: 54001 Muski Pk  
Mushko Electronics (PVT) Ltd.  
Oosman Chambers  
Abdullah Haroon Road  
Karachi 74400  
Tel: (92/21) 524-131  
Fax: (92/21) 568-2298  
Telex: 29094 MUSKO PK

### Panama

Electronico Balboa, S.A.  
Edif. El Dorado  
Ave El Paiscal #30  
Apartado 4929  
Panama 5  
Tel: (507) 36-0722  
Fax: (507) 36-1820  
Telex: 368-  
3483 ELECTRON PG

### Paraguay

ECSA Equipos Contables S.A.  
Calle Estdos Unidos No. 961  
Asuncion  
Tel: (595-21) 49-0076  
Fax: (595-21) 49-7849

**Peru**

Cia Electro Mdica, S.A.  
Los Flamencos 145, Of. 301-302  
San Isidro, Lima 27  
Tel: (51-14) 241-4325  
Fax: (51-14) 242-3703

**Philippines**

The Online Advanced Systems Corp.  
2/F, Electra House  
115-117 Esteban Street  
Legaspi Village, Makati Metro Manila  
Tel: (63/2) 815-3810  
Fax: (63/2) 816-0590  
Telex: 663-274 ONLINE PN

**Poland**

Hewlett-Packard Polska  
Ul. Nowelska 6  
01-447 Warszawa  
Tel: 22/375065  
Fax: 22/374783  
Telex: 813919

**Portugal**

Hewlett-Packard Portugal S.A.  
Rua Gregório Lopes, Lote 1732A  
Torre de Sto. António  
1400 Lisboa  
Tel: (351/1) 301 7330  
Fax: (351/1) 301 6332/3

**Puerto Rico**

Hewlett-Packard Puerto Rico (3175)  
Metro Office Texaco Plaza Suite 100  
Caparra Heights, PR 00920  
Tel: (809) 793-7800  
Fax: (809) 749-5325

**Qatar**

Qatar Datamations Systems  
Al Ahed Building, 5th floor  
Al Muthof Street  
Doha  
Tel: 974/43.99.00  
Fax: 974/43.21.54  
Telex: 4833

**Romania**

S&T Romania SRL  
Hewlett-Packard Distributor  
Sitraco Centre  
Blvd. Dimitries Cantemir 1  
Etaj II - 210, Sector 4  
Bucuresti  
Tel: (1) 3237250  
Fax: (1) 3237200

**Saudi Arabia**

Modern Electronics  
Establishment  
P.O. Box 2769  
King Abdul Azia St.  
Al-Khobar 31952  
Tel: (9663) 894 65 48/ 895 17 64  
Fax: (9663) 894 46 58  
Telex: 871106 HPMEEK SJ  
Cable: ELECTA, AL-KHOBAR  
Modern Electronics  
Establishment  
P.O. Box 1228  
Zaben Building, Tahliah St.  
Jeddah 21431  
Tel: (966/2) 661-1447  
Fax: (966/2) 661-0857  
Telex: 602712 FARNAS SJ  
Cable: ELECTA, JEDDAH

Modern Electronics  
Establishment  
P.O. Box 22015  
Prince Musad Ibn Abdulaziz St.  
Riyadh 11495  
Tel: (966/1) 476-3030  
Fax: (966/1) 476-2570 /476-7649  
Telex: 402049 MEERYD SJ  
Cable: ROUFKO

**Singapore**

Hewlett-Packard Singapore (Sales)  
Pte. Ltd. 150 Beach Road  
#29-00 Gateway West  
Singapore 0718  
Tel: (65) 291-9088  
Fax: (65) 296-7089  
Telex: 087-34209 HPSGSO RS

**Slovak Republic**

High Performance Systems  
Hewlett-Packard Distributor  
Polianky 5  
844 14 Bratislava  
Tel: 7/760217  
Fax: 7/763408

**Slovenia, Croatia, Macedonia**

Hermes-Plus  
Hewlett-Packard Distributor  
Celovaska 73  
61000 Ljubljana.  
Slovenia  
Tel: 61/193322  
Fax: 61/55597

**South Africa**

HiPerformance Systems (Pty.) Ltd.  
P.O. Box 120, Howard Place  
7450 Cape Town  
Tel: (27/21) 685-7922  
Fax: (27/21) 685-3785

HiPerformance Systems (Pty.) Ltd.  
Private Bag, Wendywood  
2144 Sandton  
Tel: (27/11) 806-1000  
Fax: (27/11) 806-1213

**Spain**

Hewlett-Packard Española, S.A.  
Avda. Diagonal, 605  
08028 Barcelona  
Tel: 93-401 91 00  
Fax: 93-430 84 68  
Avda de Zugazarte  
Hewlett-Packard Española, S.A.  
Avda de Zugazarte, 8  
Edif El Abra, 4  
48930 Las Arenas, Guecho  
Tel: 94-481 80 00  
Fax: 94-481 80 40

Hewlett-Packard Española, S.A.  
Ctra N-VI km 16,500  
28230 Las Rozas, Madrid  
Tel: 1-631 16 00  
Fax: 1-631 18 30  
Hewlett-Packard Española, S.A.  
Luis de Morales, 32  
EdificioForum  
41018 Sevilla  
Tel: 95-453 29 10  
Fax: 95-453 30 92

Hewlett-Packard Española, S.A.  
plaza de America 2-51  
46004 Valencia  
Tel: 96-395 74 75  
Fax: 96-395 42 11  
Vizcaya See Guecho

**Sri Lanka**

Precision Technical Services (PVT) Ltd.  
65/14, Park Street  
Colombo 2  
Tel: (941) 687791  
Fax: (941) 687731

**Suriname**

Surtel, Co., Inc.  
Grote Hofstraat 3-5  
P.O. Box 155  
Paramaribo  
Tel: (597) 47-7880  
Fax: (597) 42-0053

**Sweden**

Hewlett-Packard Sverige AB  
Box 19  
Skalholtsgatan 9  
164 93 Kista  
Tel: (46/8) 444 20 00  
Fax: (46/8) 444 25 25  
Hewlett-Packard Sverige AB  
Vädursgatan 6  
Box 5328  
402 27 Göteborg  
Tel: (46/31) 35-18-00  
Fax: (46/31) 35-18-99

Hjälmaragatan 3  
Box 371  
201 23 Malmö  
Tel: (46/40) 660 72 00  
Fax: (46/40) 660 72 99  
Hewlett-Packard Sverige AB  
Jägersrovägen 160  
Box 28066  
200 28 Malmö  
Tel: (46/40) 22-79-00  
Fax: (46/40) 22-79-99  
Service Office  
Hewlett-Packard Sverige AB  
Arabygatan  
Box 3161  
350 43 Växjö  
Tel: (46/470) 396-06  
Fax: (46/470) 154-05

**Switzerland**

Genève See Meyrin  
Hewlett-Packard (Suisse) SA  
39, rue de Veyrot  
CH-1217 Meyrin 1  
Tel: (41) 22-780 41 41  
Fax: (41) 22-780 42 20  
Hewlett-Packard (Schweiz) AG  
Meriedweg 11  
CH-3172 Niederwangen (Bern)  
Tel: (41) 31-980 31 11  
Fax: (41) 31-980 33 90  
Hewlett-Packard (Schweiz) AG  
In der Luberzen 29  
CH-8902 Urdorf/Zürich  
Tel: (41) 1-735 71 11  
Fax: (41) 1-735 77 00

**Taiwan, ROC**

Hewlett-Packard Taiwan Ltd.  
8/F No. 337, Fu Hsing North Road  
Taipei, 10483  
Tel: (886/2) 712-0404  
Fax: (886/2) 718-2928

**Chungli See Taoyuan Hsieh**

Hewlett-Packard Taiwan Ltd.  
12th Floor, 10 Syh-Wei 4th Road  
Kaohsiung  
Tel: (886/7) 330-1199  
Fax: (886/7) 330-8568  
Hewlett-Packard Taiwan Ltd.  
10F, 540, Sec. 1  
Wen-Hsin Road  
Taichung  
Tel: (886/4) 327-0153  
Fax: (886/4) 326-5274  
Hewlett-Packard Taiwan Ltd.  
No. 20 Kao-Shuang Road  
Ping-Chen, 32404  
Taoyuan Hsieh  
Tel: (886/3) 492-9666  
Fax: (886/3) 492-9669

## Sales Offices

### Thailand

Hewlett-Packard (Thailand) Ltd.  
11/F Pacific Place  
140 Sukhumvit Road  
Bangkok 10110  
Tel: (66/2) 254-6720  
Fax: (66/2) 254-6731

### Trinidad and Tobago

Borde Communications  
1 Valsayn Road  
Curepe, P.O. Box 897  
Port-of-Spain, Trinidad  
Tel: (809) 663-2087  
Fax: (809) 645-3352

### Tunisia

Precision Electronique  
5, rue de Chypre - Mutuelle Villa  
1002 Tunis Belvedere  
Tel: (216/1) 785-037  
(216/1) 890-672  
Fax: (216/1) 780-241  
Telex: (0409) 18238 TELECOM TN

### Turkey

Hewlett-Packard  
Bilgisayar ve Olcum Sistemleri  
A.S.  
Paris Cadesi No3 D.9  
06670 Kavaklıdere Ankara  
Turkey  
Tel: 90 (312) 425-83-13  
Fax: 90 (312) 425-47-45  
Telex: 46180

Hewlett-Packard  
Bilgisayar ve Olcum Sistemleri  
A.S.  
19 Mayıs Caddesi Nova/Baran  
Plaza K.12  
Sisli 80220  
Istanbul  
Tel: (90/212) 224 59 25  
(12 lines)  
Fax: (90/212) 224 59 39

### United Arab Emirates

Emitac Ltd.  
P.O. Box 2711  
Abu Dhabi  
Tel: (971/2) 77-04-19  
Fax: (971/2) 72-30-58  
Telex: 46306

Emitac Ltd.  
Block RBS Arencos Bldg.  
Zabel Road  
P.O. Box 8391  
Dubai  
Tel: (971/4) 37-75-91  
Fax: (971/4) 37-08-99  
Telex: 48710

### United Kingdom

Hewlett-Packard Limited  
Cain Road  
Bracknell  
Berkshire RG12 1HN  
Tel: (44/344) 366666  
Fax: (44/344) 362852  
Telex: 849 555

### United States

#### Test & Measurement Customer Business Center

*To request formal quotations, place orders, and ask for other order information.*

P.O. Box 4026  
Englewood, CO 80155-4026  
Tel: (800) 829-4444

#### Test & Measurement Customer Information Center

*For presale assistance in product selection and other product or general information.*

Tel: (800) 452-4844

### Alabama

Hewlett-Packard Co. (3114)  
620 Discovery Drive  
Huntsville, AL 35806  
Tel: (205) 971-2000  
Fax: (205) 971-8899

### Arizona

Hewlett-Packard Co. (2401)  
8080 Pointe Parkway West  
Phoenix, AZ 85044  
Tel: (602) 273-8000  
Fax: (602) 273-8022  
(602) 438-2355

Hewlett-Packard Co. (2406)  
3400 East Britannia Drive  
Bldg. C, Suite 124  
Tucson, AZ 85706  
Tel: (602) 573-7400  
Fax: (602) 573-7429

### California

Hewlett-Packard Co. (2403)  
1421 S. Manhattan Avenue  
Fullerton, CA 92631  
Tel: (714) 999-6700  
Fax: (714) 758-7559

Hewlett-Packard Co. (2438)  
130 Cremona, Suite A  
Goleta, CA 93117  
Tel: (805) 685-6100  
Fax: (805) 685-6163

Irvine See Fullerton

Hewlett-Packard Co. (2417)  
5245 Pacific Concourse Drive  
Suite 100  
Los Angeles, CA 90045  
Tel: (310) 643-5112  
Fax: (310) 535-2601

Hewlett-Packard Co. (2407)  
351 E. Evelyn Avenue  
Bldg. 333  
Mountain View, CA 94039  
Tel: (415) 694-2000  
Fax: (415) 694-3594

Hewlett-Packard Co. (2415)  
3831 N. Freeway Blvd.  
Sacramento, CA 95834  
Tel: (916) 567-8500  
Fax: (916) 567-8777  
(916) 567-8778

Hewlett-Packard Co. (2404)  
9606 Aero Drive  
San Diego, CA 92123  
Tel: (619) 279-3200  
Fax: (619) 268-8487  
(619) 279-0560

Santa Barbara See Goleta

Hewlett-Packard Co. (2428)  
5805 Sepulveda Blvd, Suite 690  
Van Nuys, CA 91411  
Tel: (818) 786-5800  
Fax: (818) 779-2350

Ventura See Van Nuys

### Colorado

Hewlett-Packard Co. (2441)  
3005 Center Green Drive, Suite 205  
Boulder, CO 80301  
Tel: (303) 938-3065  
Fax: (303) 938-3025

Hewlett-Packard Co. (2411)  
24 Inverness Place East  
Englewood, CO 80112  
Tel: (303) 649-5000  
Fax: (303) 649-5787

### Connecticut

Hewlett-Packard Co. (4457)  
4 Stamford Forum, 9th FL  
Stamford, CT 06901  
Tel: (203) 324-1003  
Fax: (203) 325-5680

Hewlett-Packard Co. (4458)  
15 Glastonbury Blvd.  
Glastonbury, CT 06033  
Tel: (203) 633-8100  
Fax: (203) 659-6087

### District of Columbia

See Rockville, Maryland

### Florida

Hewlett-Packard Co. (3179)  
5900 N. Andrews, Suite 100  
Fort Lauderdale, FL 33309  
Tel: (305) 938-9800  
Fax: (305) 938-2293

Hewlett-Packard Co. (3177)  
6177 Lake Ellenor Drive  
Orlando, FL 32809  
Tel: (407) 859-2900  
Fax: (407) 826-9309

Hewlett-Packard Co. (3166)  
5550 Idlewild, Suite 150  
Tampa, FL 33634  
Tel: (813) 884-3282  
Fax: (813) 889-4445

### Georgia

Hewlett-Packard Co. (3108)  
1995 N. Park Place  
Atlanta, GA 30339  
Tel: (404) 955-1500  
Fax: (404) 980-7010

### Hawaii

Hewlett-Packard Co. (2409)  
3660 Waiialae Ave. Suite 102  
Honolulu, HI 96816  
Tel: (808) 732-1566

### Illinois

Hewlett-Packard Co. (2619)  
2205 E. Empire Street  
Bloomington, IL 61704  
Tel: (309) 662-9411  
Fax: (309) 662-0351

Hewlett-Packard Co. (2603)  
1200 East Diehl Road  
Naperville, IL 60566  
Tel: (708) 505-8800  
Fax: (708) 505-7876

Hewlett-Packard Co. (2601)  
5201 Tollview Drive  
Rolling Meadows, IL 60008  
Tel: (708) 255-9800  
Fax: (708) 255-4995

### Indiana

Hewlett-Packard Co. (2605)  
201 W. 103rd Street, Suite 100  
Indianapolis, IN 46290  
Tel: (317) 844-4100  
Fax: (317) 843-1291

Hewlett-Packard Co. (2635)  
111 E. Ludwig Road, Suite 108  
Ft. Wayne, IN 46825  
Tel: (219) 482-4283  
Fax: (219) 480-3730

### Iowa

Hewlett-Packard Co. (2612)  
4050 River Center Court  
Cedar Rapids, IA 52402  
Tel: (319) 393-0806  
Fax: (319) 378-1024

### Kansas

Hewlett-Packard Co. (2622)  
P.O. Box 780408  
3450 N. Rock Road, Suite 300  
Wichita, KS 67278  
Tel: (316) 636-4040  
Fax: (316) 636-4504

### Kentucky

Hewlett-Packard Co. (2623)  
305 N. Hurstbourne Parkway  
Suite 100  
Louisville, KY 40222-5141  
Tel: (502) 426-0100  
Fax: (502) 426-0322

**Maryland**

Hewlett-Packard Co. (4432)  
3701 Koppers Street  
Baltimore, MD 21227  
Tel: (410) 644-5800  
Fax: (410) 362-7650

Hewlett-Packard Co. (4430)  
(4400)  
2101 Gaither Road  
Rockville, MD 20850  
Tel: (301) 258-2000  
Fax: (301) 258-5986

**Massachusetts**

Hewlett-Packard Co. (4450)  
29 Burlington Mall Road  
Burlington, MA 01803-4182  
Tel: (617) 270-7000  
Fax: (617) 221-5240

**Michigan**

Hewlett-Packard Co. (2617)  
3033 Orchard Vista S.E., Suite  
100  
Grand Rapids, MI 49546  
Tel: (616) 957-1970  
Fax: (616) 956-9022

Hewlett-Packard Co. (2607)  
39550 Orchard Hill Place Drive  
Novi, MI 48376  
Tel: (313) 349-9200  
Fax: (313) 349-9240

**Minnesota**

Hewlett-Packard Co. (2606)  
2025 W. Larpenteur Avenue  
St. Paul, MN 55113  
Tel: (612) 644-1100  
Fax: (612) 641-9787

**Missouri**

Hewlett-Packard Co. (2611)  
6601 Winchester Avenue  
P.O. Box 18230  
Kansas City, MO 64133-8230  
Tel: (816) 737-0071  
Fax: (816) 737-4690

Hewlett-Packard Co. (2610)  
530 Maryville Centre Drive  
St. Louis, MO 63141  
Tel: (314) 542-1500  
Fax: (314) 542-1585

**Nebraska**

Hewlett-Packard Co. (2616)  
2533 N. 117th Avenue  
Omaha, NE 68164  
Tel: (402) 493-0300  
Fax: (402) 493-4334

**New Jersey**

Hewlett-Packard Co. (4415)  
West 120 Century Road  
Paramus, NJ 07653  
Tel: (201) 599-5000  
Fax: (201) 599-5382

Hewlett-Packard Co. (4417)  
20 New England Ave. West  
Piscataway, NJ 08854  
Tel: (908) 562-6100  
Fax: (908) 562-6246

**New Mexico**

Hewlett-Packard Co. (2402)  
5130 Masthead NE  
Albuquerque, NM 87109  
Tel: (505) 823-6100  
Fax: (505) 823-1243

Hewlett-Packard Co. (2420)  
1362-C Trinity Drive  
Los Alamos, NM 87544  
Tel: (505) 662-6700  
Fax: (505) 662-4312

**New York**

Hewlett-Packard Co. (4444)  
114 Great Oaks Office Park  
Albany, NY 12203  
Tel: (518) 452-9947  
Fax: (518) 452-8989

**Buffalo See Cheektowaga**

Hewlett-Packard Co. (4445)  
Airport Commerce Park  
305 Cayuga Road, Suite 160  
Cheektowaga, NY 14225  
Tel: (716) 264-4100  
Fax: (716) 264-4150

Hewlett-Packard Co. (4442)  
290 Woodcliff Drive  
Fairport, NY 14450  
Tel: (716) 264-4000  
Fax: (716) 264-4150

Hewlett-Packard Co. (4440)  
5010 Campuswood Drive  
East Syracuse, NY 13057  
Tel: (315) 463-2727  
Fax: (315) 463-3150

**Huntington See Melville**

Hewlett-Packard Co. (4411)  
7 Old Sod Farm Road  
Melville, NY 11747  
Tel: (516) 753-0555  
Fax: (516) 753-3469

**Rochester See Fairport**

Hewlett-Packard Co. (4409)  
Executive Square Office Bldg.  
66 Middlebush Road  
Wappingers Falls, NY 12590  
Tel: (914) 298-9125  
Fax: (914) 298-3338

**North Carolina**

Hewlett-Packard Co. (3142)  
2000 Regency Parkway, Suite  
600  
Cary, NC 27511  
Tel: (919) 467-6600

Fax: (919) 460-2296  
(919) 460-2297

Hewlett-Packard Co. (3145)  
9401 Arrowpoint Blvd.  
Charlotte, NC 28210  
Tel: (704) 527-8780  
Fax: (704) 559-7444

Hewlett-Packard Co. (3111)  
7029 Albert Pick Road, Suite  
100

Greensboro, NC 27409  
Tel: (919) 665-1800  
Fax: (919) 668-1797  
Mailing Address  
P.O. Box 26500  
Greensboro, NC 27426

**Raleigh See Cary****Ohio**

Hewlett-Packard Co. (2624)  
4501 Erskine Road  
Cincinnati, OH 45252  
Tel: (513) 891-9870  
Fax: (513) 891-0033

**Cleveland See Strongsville**

Hewlett-Packard Co. (2614)  
540 Office Center Place  
Columbus, OH 43230-5321  
Tel: (614) 478-6200  
Fax: (614) 478-6299

Hewlett-Packard Co. (2604)  
7887 Washington Village Drive  
Dayton, OH 45459  
Tel: (513) 433-2223  
Fax: (513) 433-8633

Hewlett-Packard Co. (2608)  
15885 Sprague Road  
Strongsville, OH 44136  
Tel: (216) 243-7300  
Fax: (216) 234-7230

**Oklahoma**

Hewlett-Packard Co. (3182)  
3525 NW 56th Street, Suite C  
Oklahoma City, OK 73112  
Tel: (405) 946-9499  
Fax: (405) 948-4760

Hewlett-Packard Co. (3183)  
6655 Soth Lewis, Suite 105  
Tulsa, OK 74136  
Tel: (918) 481-2285  
Fax: (918) 481-2250

**Oregon**

Hewlett-Packard Co. (2413)  
15115 S.W. Sequoia Parkway  
Suite 100  
Portland, OR 97224  
Tel: (503) 598-8000  
Fax: (503) 598-8155

**Pennsylvania**

Hewlett-Packard Co. (2609)  
111 Zeta Drive  
Pittsburgh, PA 15238  
Tel: (412) 782-0400  
Fax: (412) 963-1300

Hewlett-Packard Co. (4420)  
2750 Monroe Blvd.  
Valley Forge, PA 19482-0713  
Tel: (215) 666-9000  
Fax: (215) 666-2034

**Tennessee**

Hewlett-Packard Co. (3117)  
404 BNA Drive  
Bldg. 200, Suite 510  
Nashville, TN 37217  
Tel: (615) 367-4700  
Fax: (615) 399-4616

**Texas**

Hewlett-Packard Co. (3197)  
9050 Capital of Texas Hwy.,  
North  
Suite 290  
Austin, TX 78759  
Tel: (512) 346-3855  
Fax: (512) 338-7278

**Dallas See Richardson**

Hewlett-Packard Co. (2405)  
5700 Cromo Drive, Suite 100  
El Paso, TX 79912  
Tel: (915) 833-4400  
Fax: (915) 833-4444

Hewlett-Packard Co. (3187)  
2000 West Loop South  
Houston, TX 77027  
Tel: (713) 439-5300  
Fax: (713) 439-5495

Hewlett-Packard Co. (3185)  
930 E. Campbell Road  
Richardson, TX 75081  
Tel: (214) 231-6101  
Fax: (214) 699-4337

Hewlett-Packard Co. (3188)  
14100 San Pedro Avenue, Suite  
100  
San Antonio, TX 78232  
Tel: (512) 494-9336  
Fax: (512) 491-1299

**Utah**

Hewlett-Packard Co. (2412)  
3530 West 2100 South  
Salt Lake City, UT 84119  
Tel: (801) 974-1700  
Fax: (801) 974-1780

**Virginia**

Hewlett-Packard Co. (3113)  
4401 Waterfront Drive, Suite  
150  
Glen Allen, VA 23060  
Tel: (804) 747-7750  
Fax: (804) 965-9297

**Washington**

Hewlett-Packard Co. (2410)  
15815 S.E. 37th Street  
Bellevue, WA 98006  
Tel: (206) 643-4000  
Fax: (206) 643-8748

**Wisconsin**

Hewlett-Packard Co. (2615)  
275 N. Corporate Drive  
Brookfield, WI 53045  
Tel: (414) 792-8800  
Fax: (414) 792-0218

## **Sales Offices**

### **Uruguay**

**Conatel S.A.**

**Ejido 1690**

**Montevideo**

**Tel: (598) 2-920314**

**Fax: (598) 2-920660**

---

## Index

### Numerics

#### 10/100 Ethernet

Documentation 8-17

PC Card 8-16

PC Card Drivers 8-17

100Base-TX/10Base-T Ethernet connector 4-4

### A

additional help B-6

alternate boot process 2-6

application key 2-9

AT Command Set D-3

AUI 4-3

Autoexec.bat C-4

### B

bag of parts 7-3

breakout box

connections E-3

RS232/V.24 E-3

switches E-3

Button Mouse 2-9

Keyboard-Button Cover 2-9

### C

cable

power E-4

CD control signals E-3

circuits

RS-232/V.24

circuits jumpering E-3

Config.sys C-4

connections

breakout box E-3

RS-232 test connector E-3

RS-232/V.24

test connectors E-3

connector board 7-3

connector card 7-6

connector pinouts

RS-232/V.24 E-8

RS-449 E-9

V.35 E-10

contrast control 2-12

control characters 2-10

CTS control signals E-3

### D

data transmitter, internal E-4

date 2-8

Declaration of Conformity

J2293B,J2294B,J2296B,J2297B F-11

J2294C F-3

J2298B,J2299B F-11

J2300C F-4

J2306B/J2309B F-5

J2307A F-6

J2524A F-7

J2527A F-8

J2900A F-9

J2904A F-10

J2904B F-11

J2905B F-12  
J2908A F-13  
J2909A F-14  
J2912A F-15, F-16  
J2913A F-16  
J3444A F-17  
J3445A F-18  
J3446C and J3447A F-19  
J3754C F-20

disk compression A-3  
display 2-12  
    connecting an external 2-12  
    external 2-12  
DSR control signals E-3  
DTE switch E-4  
DTR control signals E-3

## E

E4594A Serial number label 1-5  
Edit Windows 95 Autoexec.bat or Config.sys C-3  
EIA-232D (Formerly RS-232C) specifications E-4  
empty Undercradle 7-8  
endcap expander 7-3  
ERROR message D-3  
escape sequence - AT D-3  
external  
    interface connector 3-3  
    monitor 3-3  
    monitor port 2-12  
    port E-5  
External Monitor 5-3

## F

FAX ii  
filler panel 6-3

flat endcap 7-3  
frame ground E-4  
functions  
    V-Series  
        interfaces E-7

## G

Graphical User Interface C-3  
grounding E-4  
    ground-loop problems E-4  
    power cable E-4  
    protective ground E-4  
Grounding Strips 7-3  
GUI C-3

## H

Hayes Command Set D-3  
HP Demo Icons 2-15  
    remove 2-15  
HP Internet Advisor  
    LAN C-3  
    WAN C-3

## I

I/O address space 8-12  
impedance, source E-4  
Indicators  
    Mark/Space Indicator E-4  
initializing the modem 8-13  
install  
    remove Interface Modules 6-6  
    Windows 95 applications C-4  
Intel Pentium P5 Chip 2-3  
Interface Module 6-3  
    Filler Panel 6-3



- Install 6-3
- Remove 6-4
- Interfaces
  - Pin-out comparison
    - CCITT V.35 E-11
    - RS-232C/CCITT V.24 E-11
    - RS-449 E-11
- internal data transmitter E-4
- interrupts 8-11

## J

- J2295A empty Undercradle 7-8
- J2300C
  - Dual PC Card slots 3-4, 5-4
  - External Interface connector 3-3
  - External Monitor 3-3
  - flexible disk drive 3-4, 5-4
  - handset connector 3-4
  - headphones 3-3, 5-3
  - Interface Module 3-4
  - microphone 3-3
  - module release latch 3-4
  - parallel port 3-3, 5-3
  - Power cable receptacle 3-3, 5-3
  - RS-232/V.24 connectors 3-3
  - RS-449 connector 3-4
  - serial port 3-3
  - V.35 connector 3-4
- J3446C
  - 100Base-TX/10Base-T Ethernet connector 4-4
  - Ethernet 4-3
  - external
    - monitor 4-3
  - Fast Ethernet 4-3
  - flexible disk drive 4-4
  - Headphones 4-3

- Interface Module slot 4-4
- Microphone 4-3
- Module Release Latch 4-4
- on-off switch 4-3
- parallel port 4-3
- PC Card Slot 4-4
- power cord
  - receptacle 4-3
- removable LED Label 4-5
- serial port 4-3
- Top Panel Label 4-5, 5-5

## jacks

- source E-5
- jumpering capabilities, RS-232/V.24 circuits E-3

## K

- keyboard 2-9
- keypad 2-11
- LED 2-11
- Keyboard-Button Cover 2-9

## L

- LAN Internet Advisor
  - electronic mail 8-16
  - file transfer 8-16
  - right side 4-4
- lateral switch bank E-3
- LCD VGA display 2-12, B-4
- LED lights
  - active interface LEDs
    - E-5
    - RS-232/V.24
      - LED E-5
    - RS-449 LED E-5
    - T1/E1 LED E-5

## V.35

### LED E-5

Lead status LEDs E-6

Mark LEDs E-4

Space LEDs E-4

System LEDs E-3

LEDs 2-11

## M

Mainframe Specifications 2-3

Mark LEDs E-4

Mark/Space Indicator E-4

metal plate 7-4

Microphone 5-3

Microsoft ®Windows ® 95 1-4, C-3

MII 4-3

Modem 2-14

modem

AT Commands D-4

AT commands D-4

AT commands/descriptions text file D-4

initializing 8-13

PC Card setup 8-14

PC Cards 8-13

transmission rates 8-13

module release latch 6-3

monitor, connecting an external 2-12

MS-DOS Compatibility Mode C-3

MS-DOS mode 2-6, C-3

## N

### NIC

EtherTwist configuration 8-16

Num Lock key 2-11

numeric

keypad 2-11

parameter, modem commands D-3

## O

on-off switch 2-4, 3-3, 5-3

operating

conditions B-5

restrictions x

systems C-3

## P

Parallel Port connector 2-16

parameter, numeric, modem commands D-3

PC Card 8-3

AT Commands and descriptions D-4

compatibility 8-3

configurations 8-4

Ethernet 8-16

general tips 8-4

I/O address space 8-12

insertion 8-5

install 8-5

interrupts 8-11

Modem 8-13

properties in Windows 95 8-7

removal 8-6

slot 4-4, 8-3

System Identification 8-6

PC Specifications 2-4

physical characteristics B-3

ports

external port E-5

RS-449 port E-5

V.35 E-5

power cable E-4

receptacle 3-3, 5-3

power cord 2-4

## printer

- connecting 2-16

- selecting 2-17

Product Information viii

Product Matrix 1-5

protective ground E-4

## R

### receivers

- V-Series

- signal receivers E-4

remote control 8-14

RS-232 test connector E-3

RS-232/V.24

- circuits, jumpering E-3

- connector pinouts E-8

- LED E-5

- test connectors E-3

RS-449

- connector pinouts E-9

- LED E-5

- port E-5

RTS control signals E-3

rubber feet 7-3

## S

### safety

- conditions B-6

- information vii

Scandisk A-3

Serial Port 5-3

### setting

- printer selection 2-17

- time and date 2-8

Shortcut icons 2-15

signal ground E-4

## signals

- CD control signals E-3

- CTS control signals E-3

- DSR control signals E-3

- DTR control signals E-3

- RTS control signals E-3

- terminal generated control signals E-4

- V-Series

- signal receivers E-4

silver tabs 7-10

slave setup 8-15

software A-3

### source

- impedance E-4

- jacks E-5

- voltage E-5

Space LEDs E-4

speakers 2-3

### Specifications

- EIA-232D (Formerly RS-232C) E-4

standard connectors 3-5, 4-6

Start button 2-5

supported configurations 1-5, 1-6

SVGA display 2-12, B-4

### switches

- breakout box switches E-3

- DTE switch E-4

- lateral switch bank E-3

- vertical switch bank E-4

System LEDs E-3

## T

T1/E1 LED E-5

terminal generated control signals E-4

### tests

- RS-232 test connector E-3

- RS-232/V.24

test connectors E-3  
time 2-8  
Torx wrench 7-3  
transmitters  
    internal data transmitter E-4

## U

U.S.A. Technical Response Center ii  
undercradle  
    add 7-4  
    assembly 7-13  
    attaching 7-4  
    bottom 7-10  
    connector board 7-6, 7-11  
    disassembly 7-12  
    empty 7-8  
    install PC Cards 7-12  
    J2295A 7-8  
    left side 7-8  
    metal plate 7-4  
    remove 7-7  
    right side 7-8  
    right side endcap expander 7-9  
    right side flat endcap 7-9  
    silver tabs 7-11  
    top 7-10

## V

V.35  
    connector pinouts E-10  
    LED E-5  
    port E-5  
vertical switch bank E-4  
V-Series  
    functions E-7  
    interfaces

RS-232 E-7  
RS-449 E-7  
V.35 E-7  
signal receivers E-4

## W

WAN Internet Advisor  
    Interface Modules 4-4  
Warning Symbols viii  
Web ii  
Windows 95 2-5  
    keys 2-9  
Windows 95 MS-DOS Compatibility Mode 2-6,  
    C-3



Copyright © 1997  
Hewlett-Packard  
Printed in the USA 12/97



**5967 — 1449**